

Fig. 4.77 Removing rear cushion

- ① 8 mm cap nuts
- ② Rear cushion

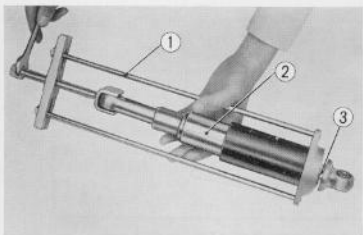


Fig. 4.78 Disassembling rear cushion

- ① Rear cushion disassembly and assembly tool
- ② Rear cushion
- ③ Rear cushion lock nut

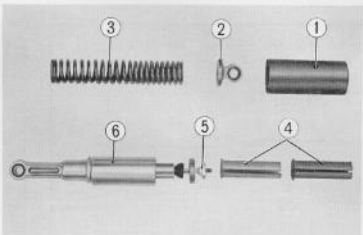


Fig. 4.79 Component parts of rear cushion

- ① Rear cushion upper case
- ② Rear cushion upper metal
- ③ Rear cushion spring
- ④ Rear cushion rod case
- ⑤ Rear cushion locking nut
- ⑥ Rear cushion bottom metal

B. Disassembly

1. Remove the 8 mm upper and lower cap nuts ①. Remove the rear cushion assembly ②. (Fig. 4.77)

2. Compress the rear cushion upper case with a special tool ① (tool No. 07035-03301) and take out the rear cushion lock nut ③. Remove the upper case. (Fig. 4.78)

3. Remove the rear cushion components parts. (Fig. 4.79)