

## 8. SUPPLEMENT TO S90ZK1

### 1. CAM CHAIN TENSIONER

The cam chain tensioner was changed from the hydraulic self-adjusting type to the manually adjustable type.

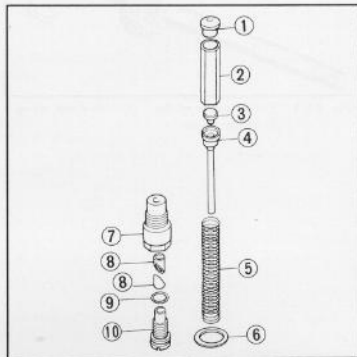


Fig. K1.1 ① Rubber tensioner ⑥ Sealing washer (14mm)  
② Tensioner push rod ⑦ Sealing bolt  
③ Rubber push ⑧ Push rod lock collar  
④ Tensioner push rod B ⑨ O-ring  
⑤ Spring ⑩ Tensioner adjusting bolt

If the cam chain is excessively noisy with the engine idling, the tension of the cam chain is improper and requires adjustment.

1. To adjust, turn the adjusting bolt in or out as necessary.

Turn the adjusting bolt in a clockwise direction when the chain produces a chattering noise, and turn it in a counterclockwise in case of a whining noise. Set the adjusting bolt to a point where the chain noise is the smallest.

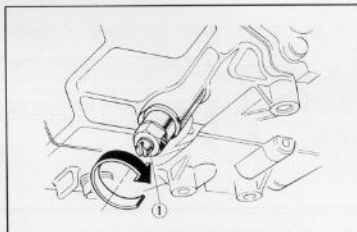


Fig. K1.2 ① Adjusting bolt