


## FRONT FENDER


### REMOVAL

- Remove the front fender mounting special bolts.
- Remove the front fender forward.

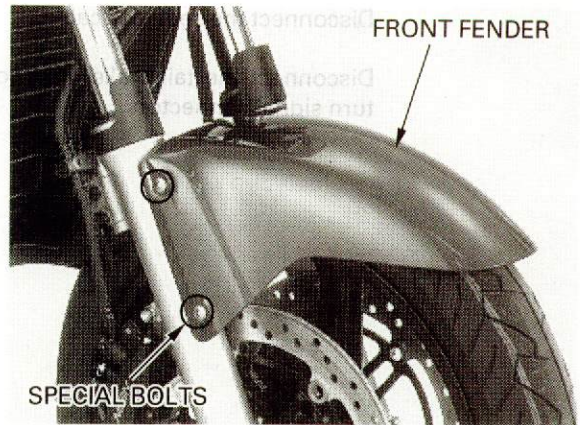

### INSTALLATION

Installation is in the reverse order of removal.

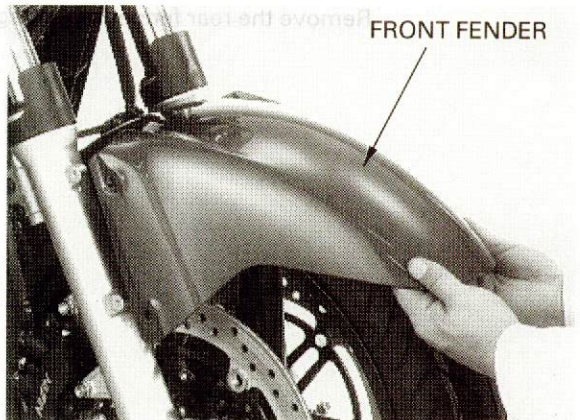

## REAR FENDER

### REMOVAL

- Remove the following:
- Rear cowl (page 2-2)
  - Battery (page 16-5)
  - Fuel cut-off relay
  - Engine stop relay
  - Starter relay switch

Unhook the retaining tab and remove the fuse box. Unhook the retaining tab and remove the main fuse case.

Disconnect the rear brake light switch connector and engine stop sensor connector.

Remove the retaining band and ECM (Engine Control Module), then disconnect the multi-connectors.

