

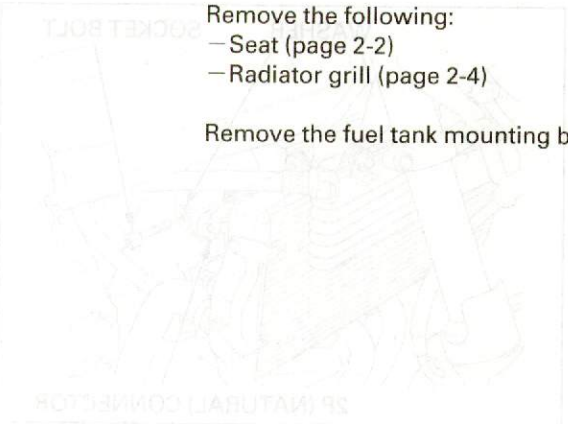
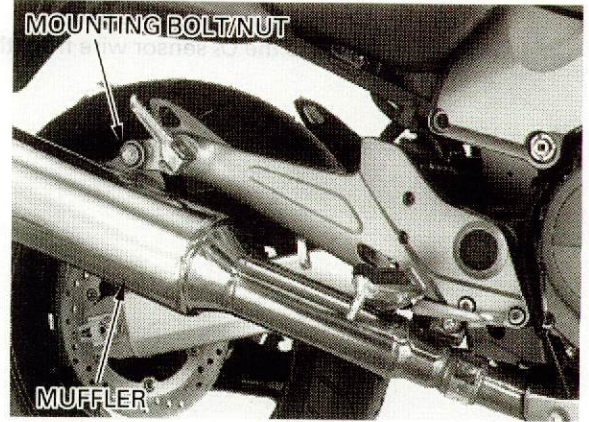




Remove the muffler rear mounting bolt/nut, then remove the muffler.
Remove the muffler gasket.

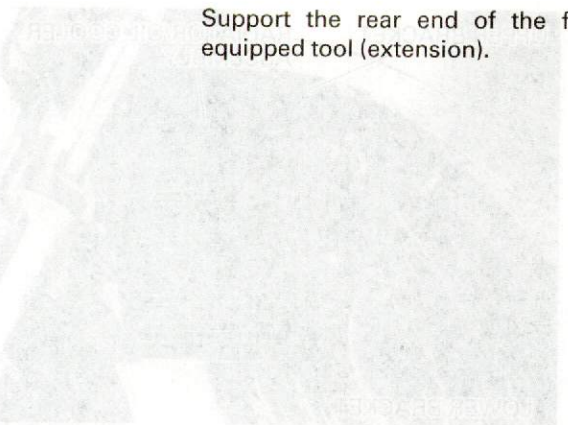

Remove the following:
– Seat (page 2-2)
– Radiator grill (page 2-4)
Remove the fuel tank mounting bolts.

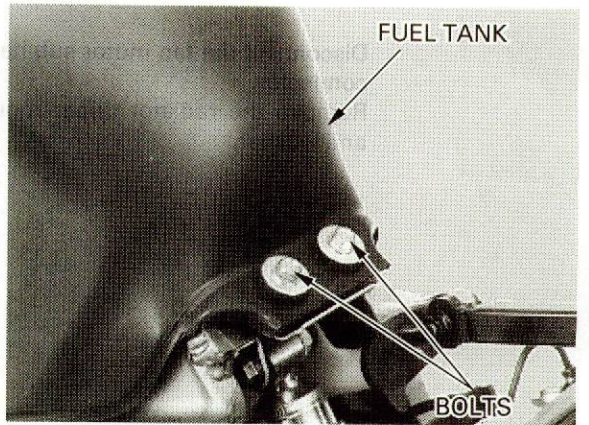

Support the rear end of the fuel tank using a equipped tool (extension).

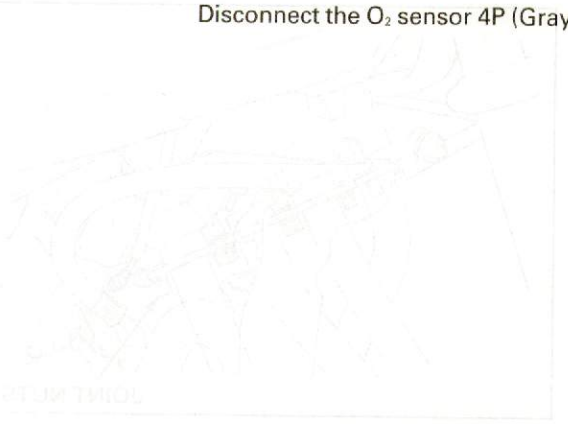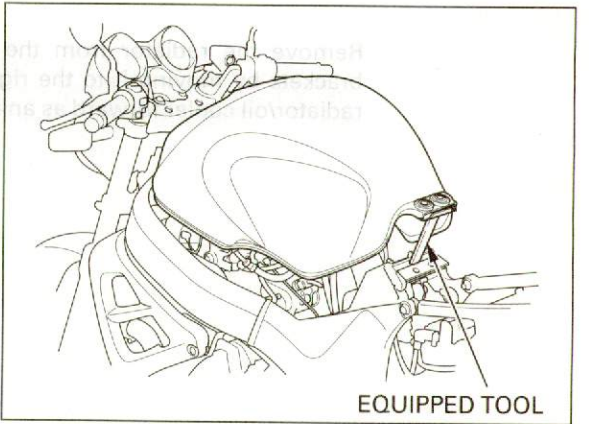

Disconnect the O₂ sensor 4P (Gray) connector.

