

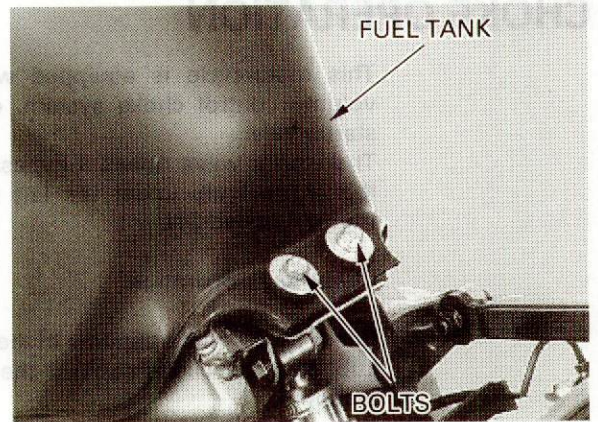
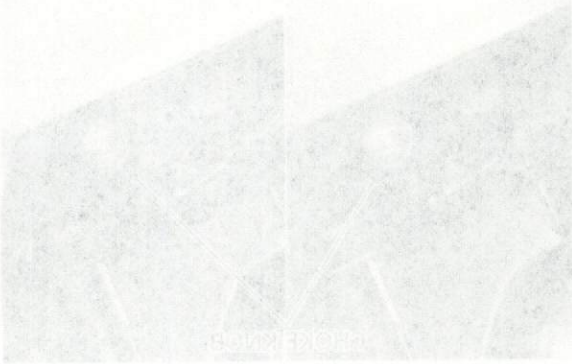


MAINTENANCE



Remove the fuel tank rear mounting bolts.

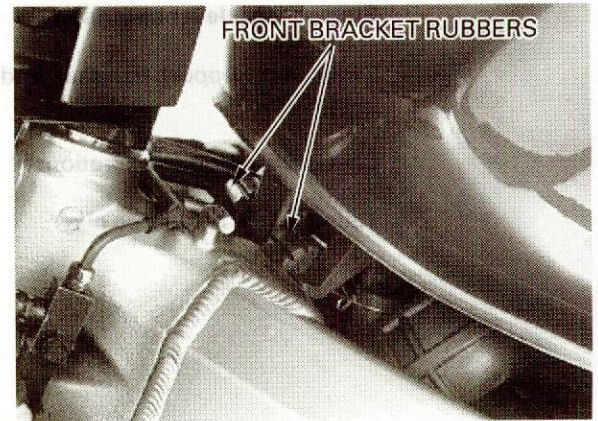

Pull out the fuel tank front bracket rubbers from the frame.

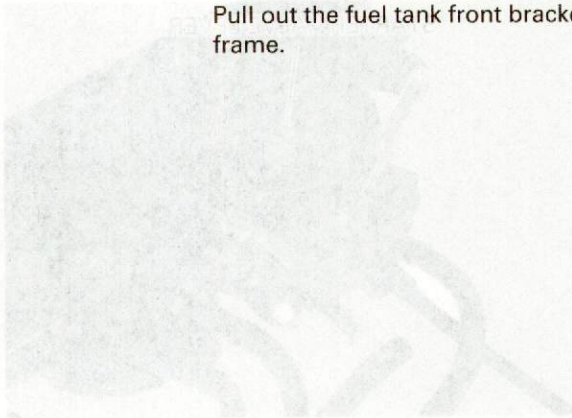

Remove the fuel tank mounting collar, temporarily install a fuel tank mounting bolts.

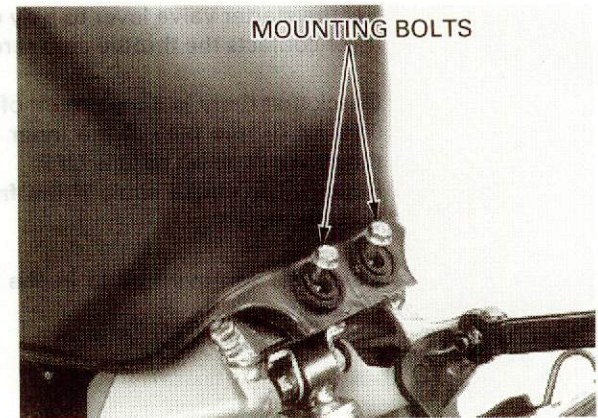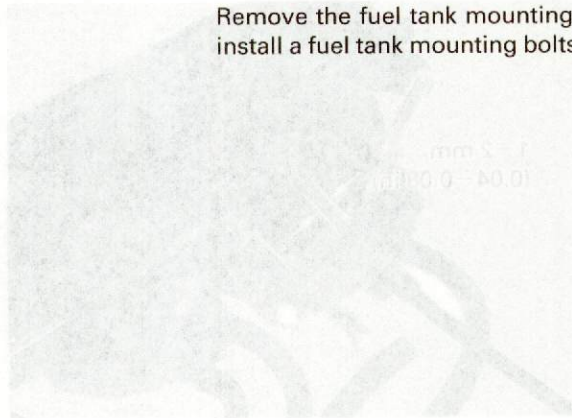

Support the front end of the fuel tank using a suitable support as shown.

