

## HEADLIGHT AIM


**▲WARNING**

*An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.*


Adjust the headlight beam as specified by local laws and regulation.

Place the motorcycle on a level surface.

Adjust the headlight beam vertically by loosening the headlight case mounting bolts and move the headlight case .

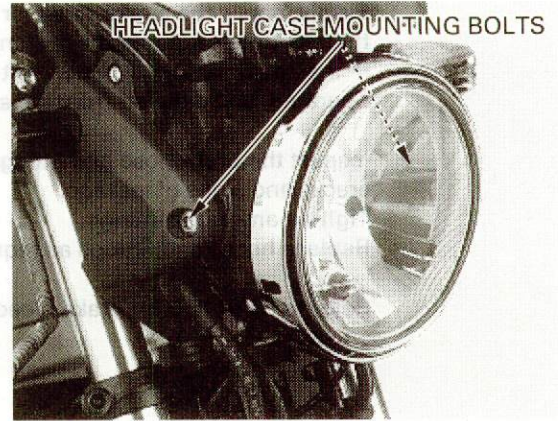

Horizontally beam adjustment are made using the horizontal beam adjusting screw. A clockwise rotation moves the beam toward the right side of the rider.

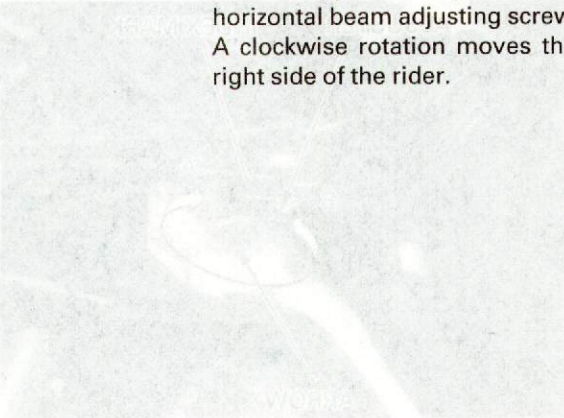

## CLUTCH SYSTEM

Measure the clutch lever free play at the end of the clutch lever.

**Free play:** 10–20 mm (3/8–13/16 in)



Minor adjustments are made using the upper adjuster at the clutch lever. Loosen the lock nut and turn the adjuster.

**CAUTION:**

*The adjuster may be damaged if it is positioned too far out, leaving minimal thread engagement.*

If the adjuster is threaded out near its limit and the correct free play cannot be obtained, turn the adjuster all the way in and back out one turn. Tighten the lock nut and make a major adjustment as described below.

