

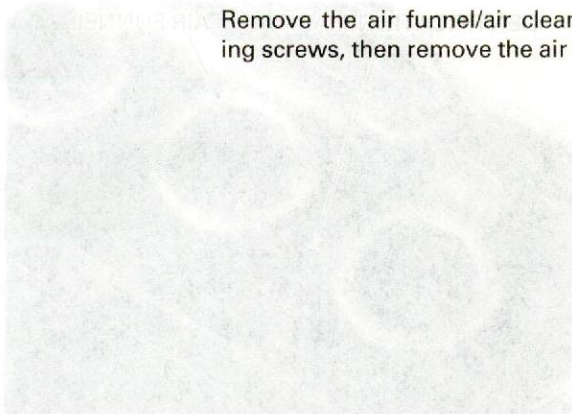


Remove the air funnel/air cleaner housing mounting screws, then remove the air funnels.

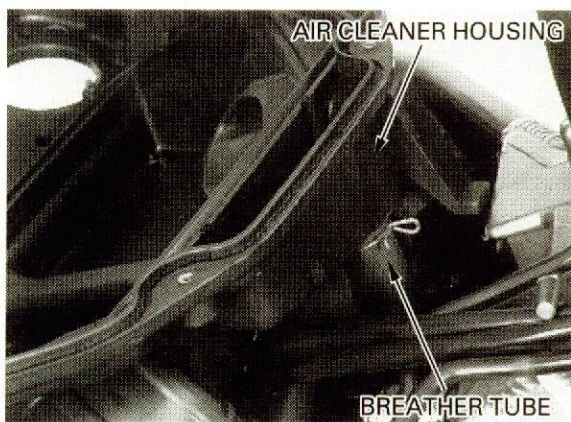


Disconnect the crankcase breather tube from the air cleaner housing.

Remove the air cleaner housing.

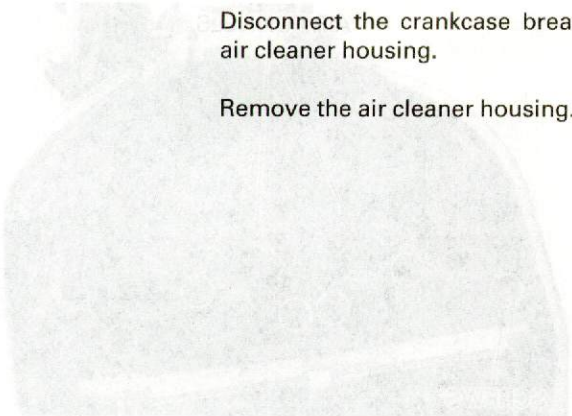

INSTALLATION

Check that the throttle body O-rings are in good condition, replace if necessary.

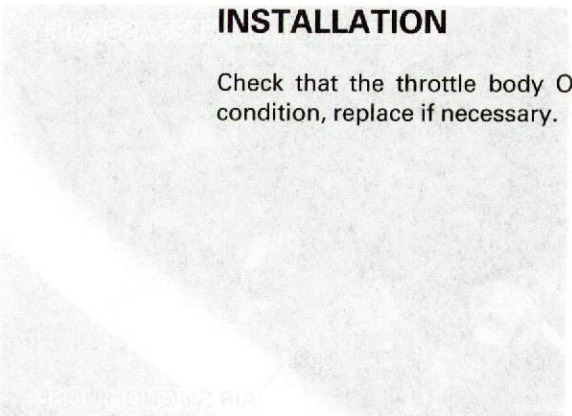

Connect the crankcase breather tube to the air cleaner housing.
Install the air cleaner housing onto the throttle body.

