


FUEL SYSTEM (Programmed Fuel Injection)

Loosen the engine side insulator band screws.

Remove the throttle body from the cylinder head.

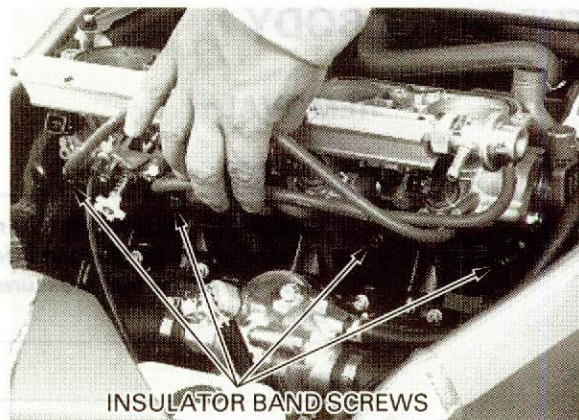


Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.

Remove the insulators from the throttle body.

CAUTION:

Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed.

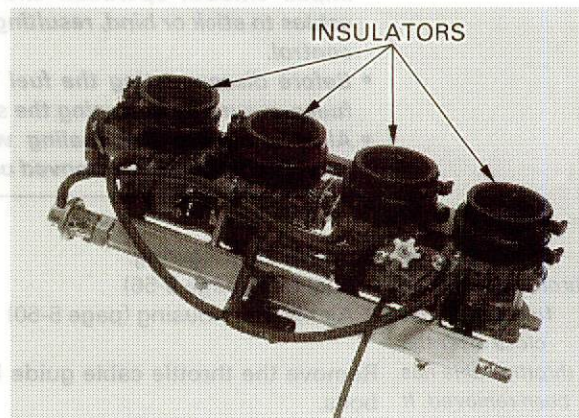

CAUTION:

- Do not damage the throttle body. It may cause incorrect throttle and idle valve synchronization.
- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.

TOP VIEW:

