

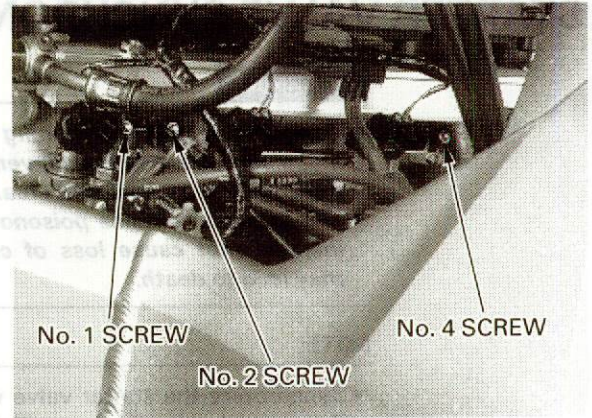
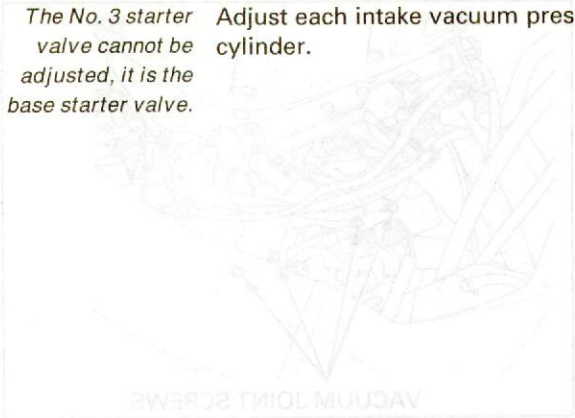


# FUEL SYSTEM (Programmed Fuel Injection)

The No. 3 starter valve cannot be adjusted, it is the base starter valve.


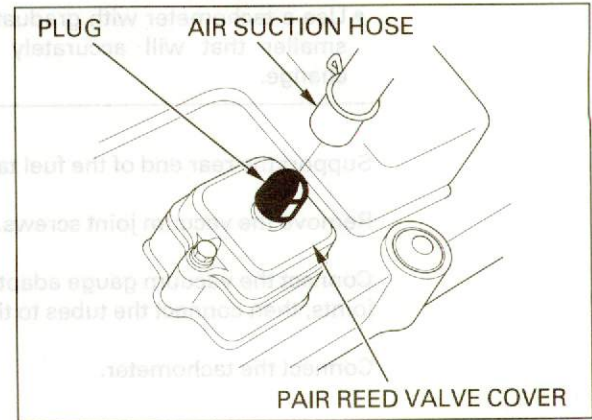


Remove the plugs and connect the PAIR air suction hoses to the reed valve covers.

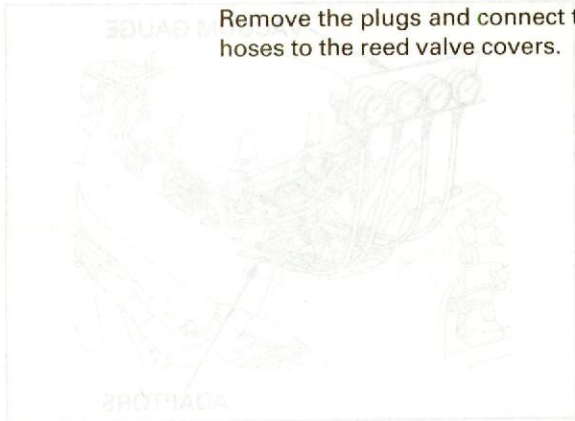

Adjust the idle speed if the idle speed differs from the specified speed.

**IDLE SPEED:  $1,100 \pm 100 \text{ min}^{-1}$  (rpm)**

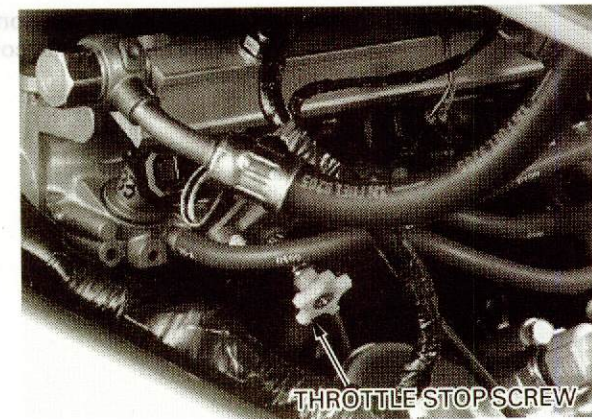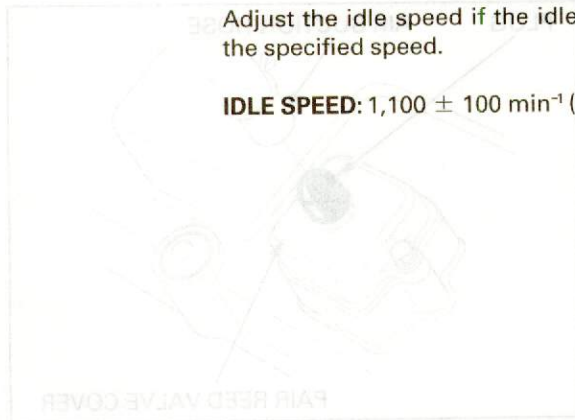

Remove the vacuum gauge and adaptors. Install and tighten the intake port vacuum joint screws.

