

8. CYLINDER HEAD/VALVES

| | | | |
|--|-------------|---|-------------|
| SERVICE INFORMATION | 8-1 | VALVE GUIDE REPLACEMENT | 8-16 |
| TROUBLESHOOTING | 8-3 | VALVE SEAT INSPECTION/REFACING | 8-17 |
| CYLINDER COMPRESSION TEST | 8-4 | CYLINDER HEAD ASSEMBLY | 8-20 |
| CYLINDER HEAD COVER REMOVAL | 8-5 | CYLINDER HEAD INSTALLATION | 8-21 |
| CYLINDER HEAD COVER DISASSEMBLY | 8-6 | CAMSHAFT INSTALLATION | 8-23 |
| CAMSHAFT REMOVAL | 8-7 | CYLINDER HEAD COVER ASSEMBLY | 8-27 |
| CYLINDER HEAD REMOVAL | 8-11 | CYLINDER HEAD COVER INSTALLATION | 8-27 |
| CYLINDER HEAD DISASSEMBLY | 8-13 | CAM CHAIN TENSIONER LIFTER | 8-30 |
| CYLINDER HEAD INSPECTION | 8-14 | | |

SERVICE INFORMATION

GENERAL

- This section covers service of the cylinder head, valves and camshaft.
- The camshaft services can be done with the engine installed in the frame. The cylinder head service required engine removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft lubricating oil is fed through oil passages in the cylinder head. Clean the oil passages before assembling the cylinder head.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head.