

CYLINDER HEAD COVER REMOVAL

Remove the air cleaner housing (page 5-60).
Remove the spark plug caps (page 3-7).

Disconnect the PAIR control solenoid valve 2P (Natural) connector.




Disconnect the crankcase breather tube.

Disconnect the PAIR control solenoid valve air suction hoses, then remove the PAIR control solenoid valve assembly.



Remove the throttle cable guide bracket mounting bolts.
Disconnect the throttle cable ends from the throttle drum.

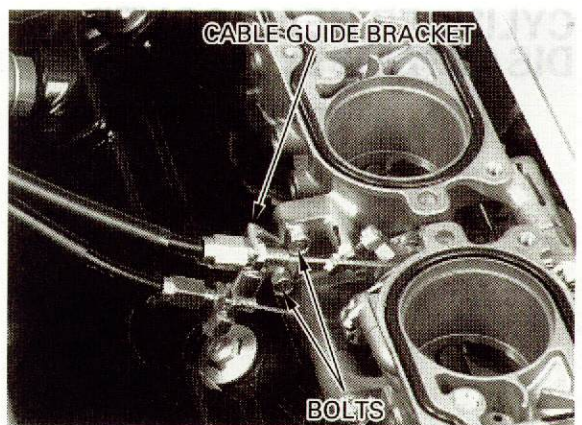

Remove the SH bolts and PAIR reed valve covers from the cylinder head.

