

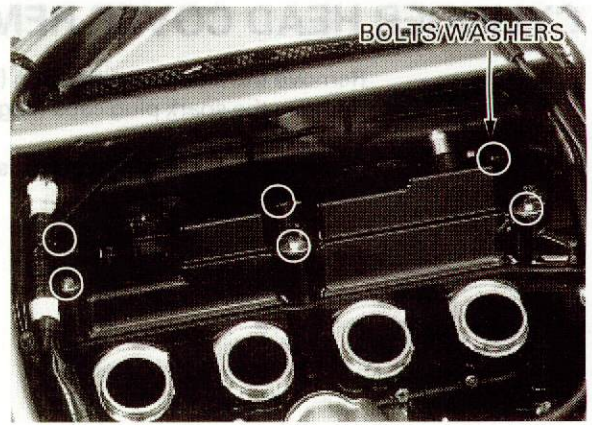
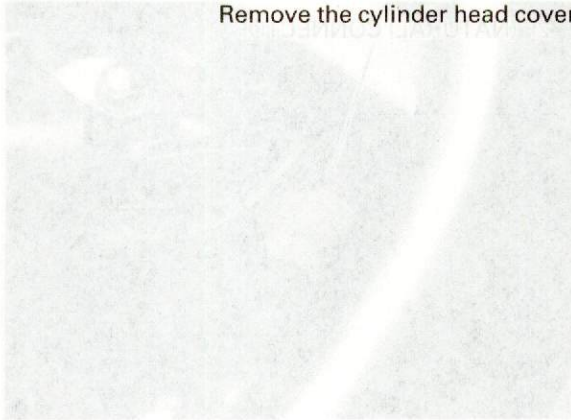


CYLINDER HEAD/VALVES

Remove the cylinder head cover bolts and washers.


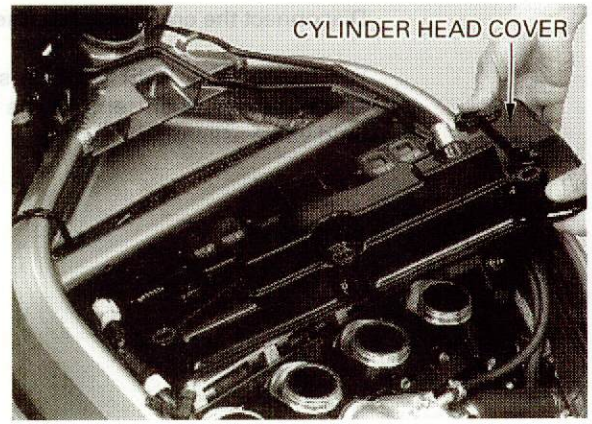


Remove the cylinder head cover forward.

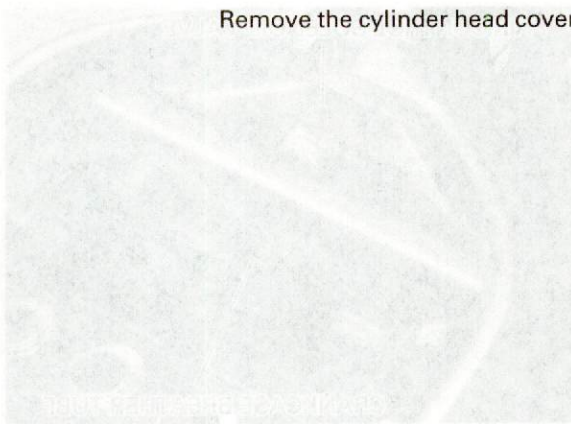

CYLINDER HEAD COVER DISASSEMBLY

Remove the cylinder head cover packing.

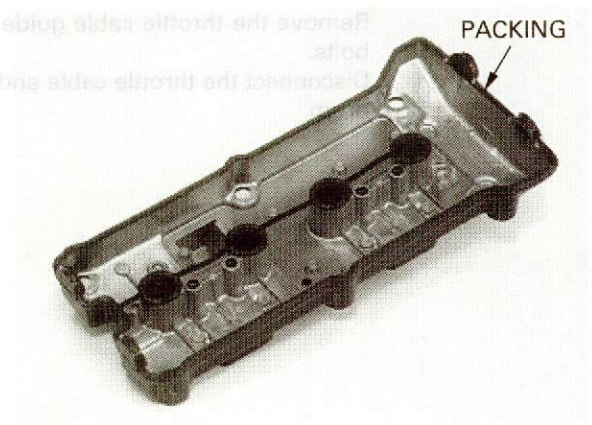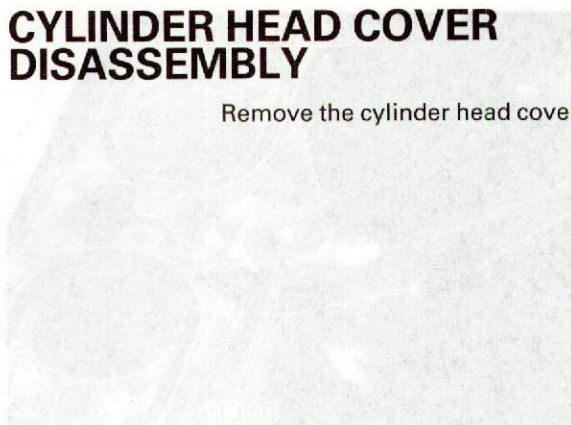

Remove bolts and breather separator and gasket

