

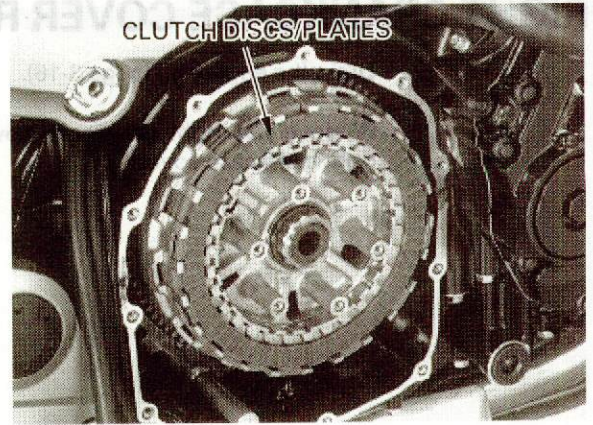
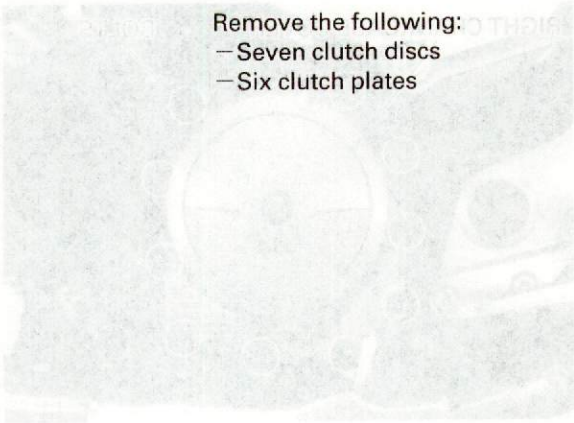


# CLUTCH/GEARSHIFT LINKAGE

Remove the following:  
- Seven clutch discs  
- Six clutch plates

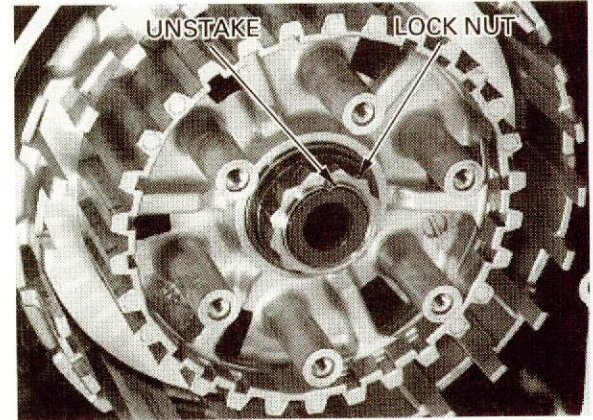

Unstake the clutch center lock nut.


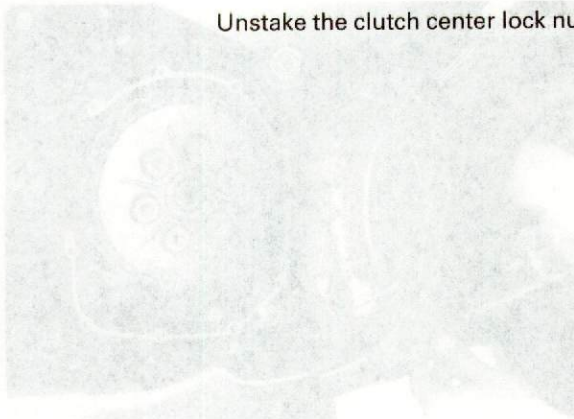


Hold the clutch center with the clutch center holder, then remove the lock nut.

**TOOL:**  
**Clutch center holder**

07724-0050002  
(Equivalent commercially available)

Discard the lock nut.

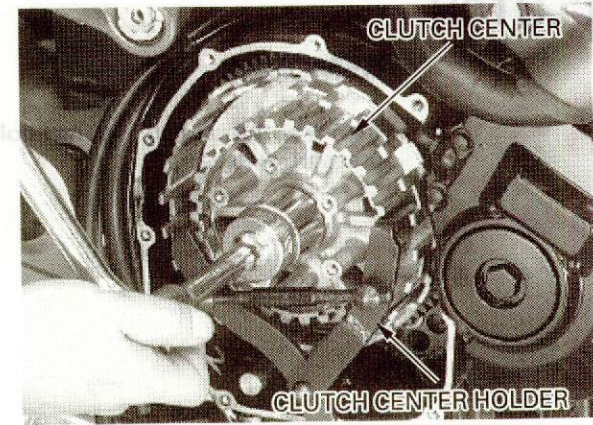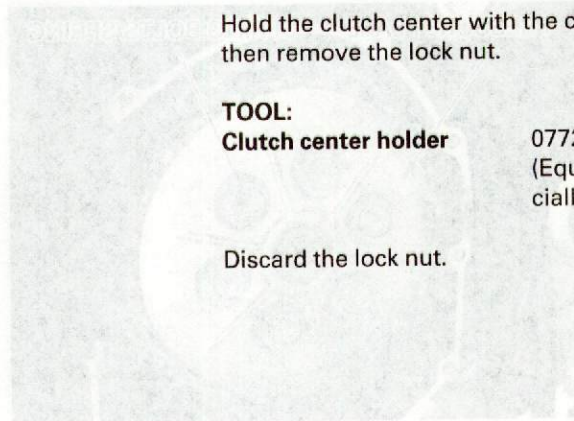

Remove the lock washer, thrust washer and clutch center.

