


GEARSHIFT LINKAGE


GEARSHIFT LINKAGE REMOVAL

- Remove the following:
- Right crankcase cover (page 9-3)
 - Clutch assembly (page 9-3)

Remove the bolt and gearshift pedal.

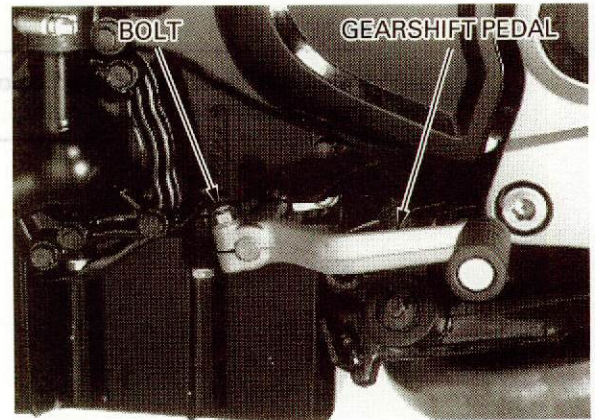


Pull the gearshift spindle assembly and thrust washer out of the crankcase.

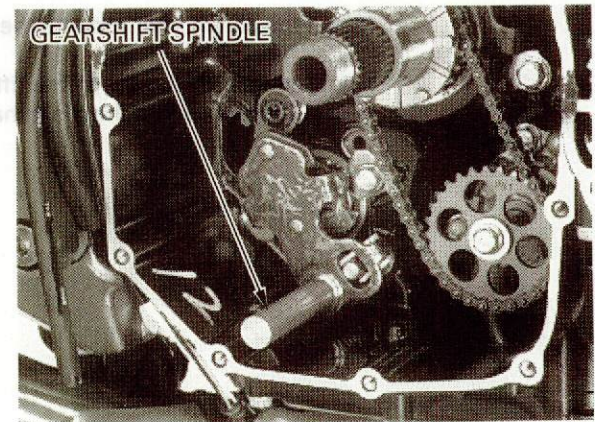

Remove the following:

- Stopper arm bolt
- Stopper arm
- Return spring
- Washer
- Dowel pins
- Socket bolt
- Gearshift cam

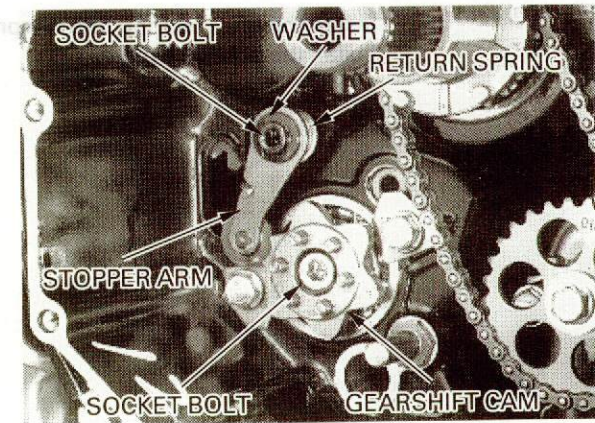

GEARSHIFT LINKAGE INSPECTION

Check the gearshift spindle for wear, damage or bending.
Check the return spring for fatigue or damage.

