
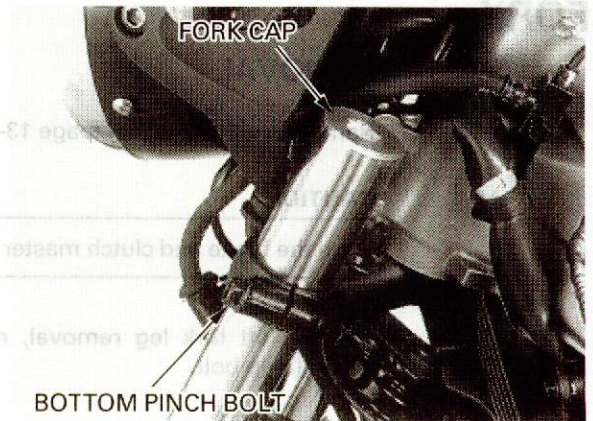


## FRONT WHEEL/SUSPENSION/STEERING

When the fork leg will be disassembled, lower the fork tube and temporarily tighten the bottom pinch bolt. Loosen the fork cap, but do not remove it yet.


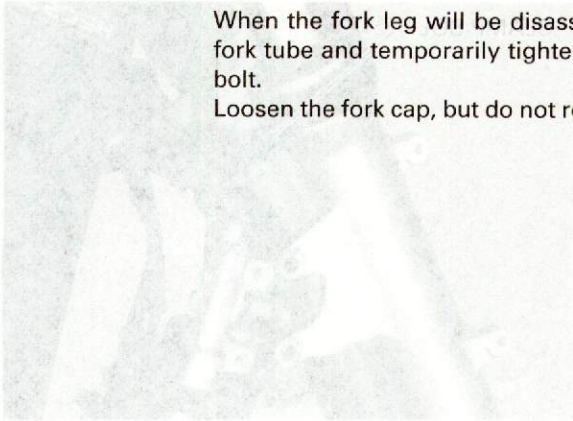


### DISASSEMBLY



#### CAUTION:

***Be careful not to scratch the fork tube or damage the dust seal.***

Remove the fork protector from the fork slider by lifting at the three pry points.

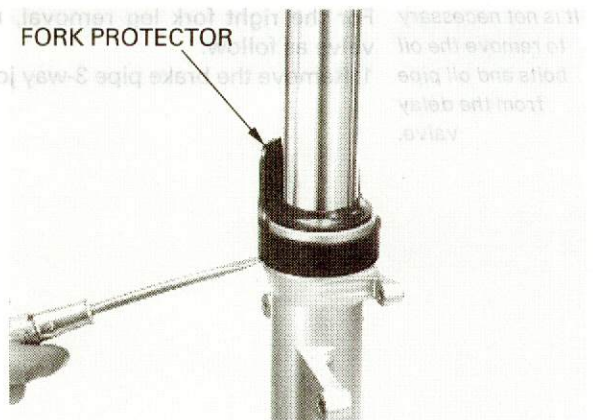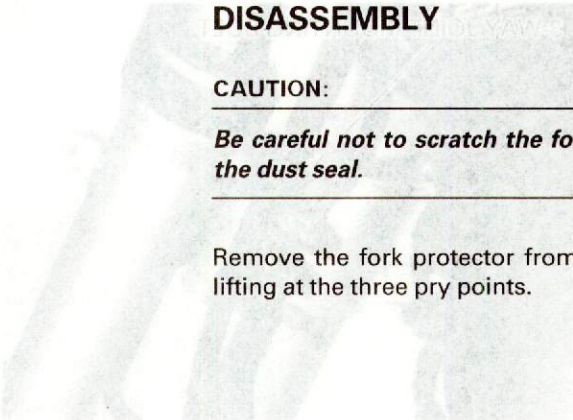

Remove the fork cap from the fork tube.

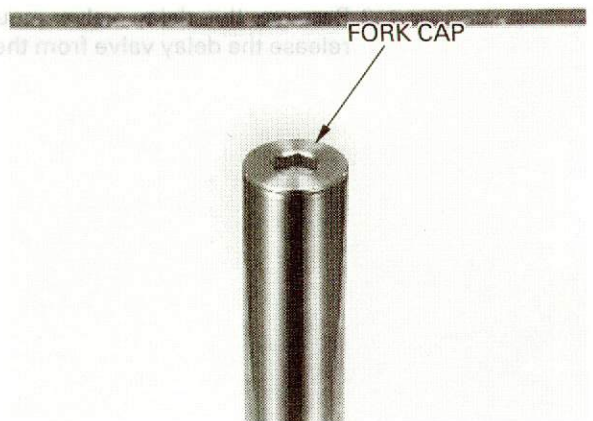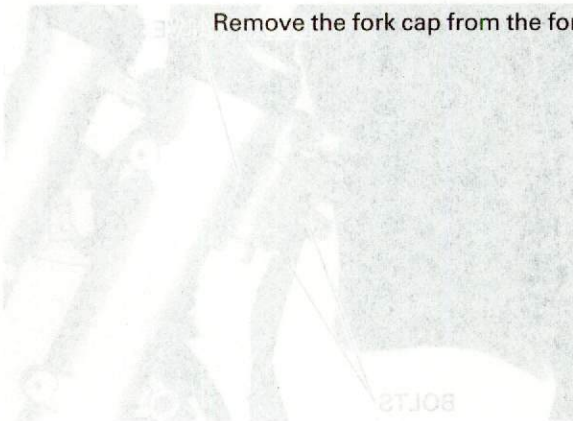

Hold the damper rod lock nut with a 14 mm spanner, then loosen and remove the fork cap from the damper rod.

Remove the spring collar.

