

## Driven flange bearing installation

Drive the new driven flange bearing into the driven flange using the special tools.

### TOOLS:

**Driver**


07749-0010000

**Attachment, 62 × 68 mm**


07746-0010500

**Pilot, 25 mm**

07746-0040600

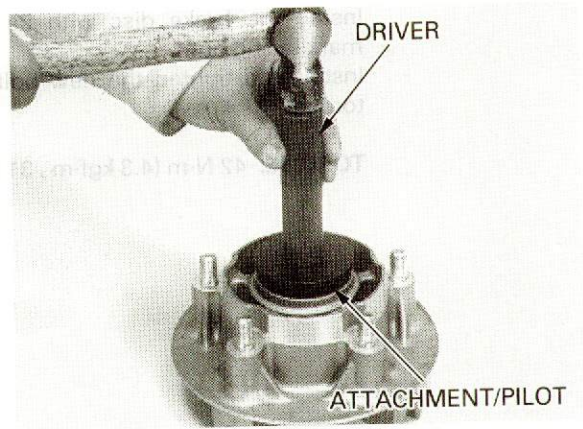

Install the driven flange collar.

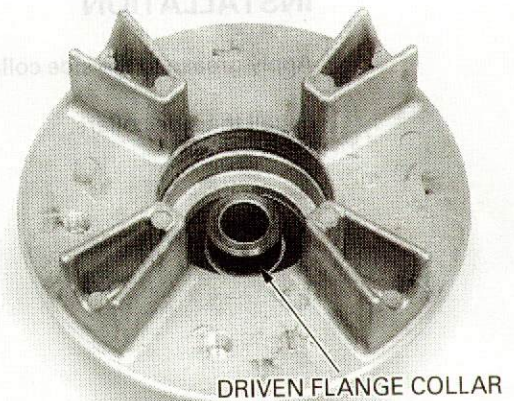

Install the wheel damper rubbers into the wheel hub.

Apply oil to the new O-ring and install it into the groove of the wheel hub.



Install the driven flange assembly into the left wheel hub.

If the driven sprocket was removed, install the driven sprocket and tighten the nuts.

**TORQUE:** 108 N·m (11.0 kgf·m , 80 lbf·ft)

Apply grease to the dust seal lips, then install it into the driven flange.

