


## HYDRAULIC BRAKE

Measure the brake disc warpage with a dial indicator.

**SERVICE LIMIT:** 0.30 mm (0.012 in)

Check the wheel bearings for excessive play, if the warpage exceeds the service limit.  
Replace the brake disc if the wheel bearings are normal.

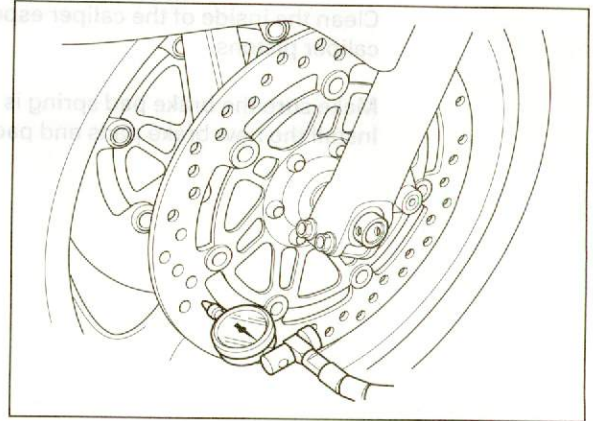

## FRONT MASTER CYLINDER

### REMOVAL

Drain the lever brake hydraulic system (page 15-5).

Disconnect the brake light switch wire connectors. Remove the brake hose oil bolt, sealing washers and brake hose eyelet.

### CAUTION:

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*



Remove the rearview mirror. Remove the bolts from the master cylinder holder and remove the master cylinder assembly.



### DISASSEMBLY

Remove the pivot bolt/nut and brake lever assembly.

