

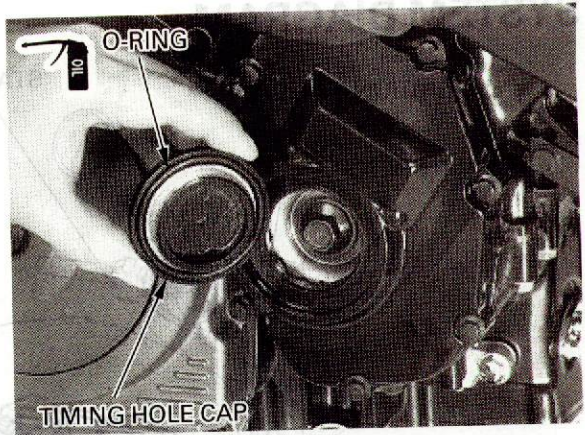
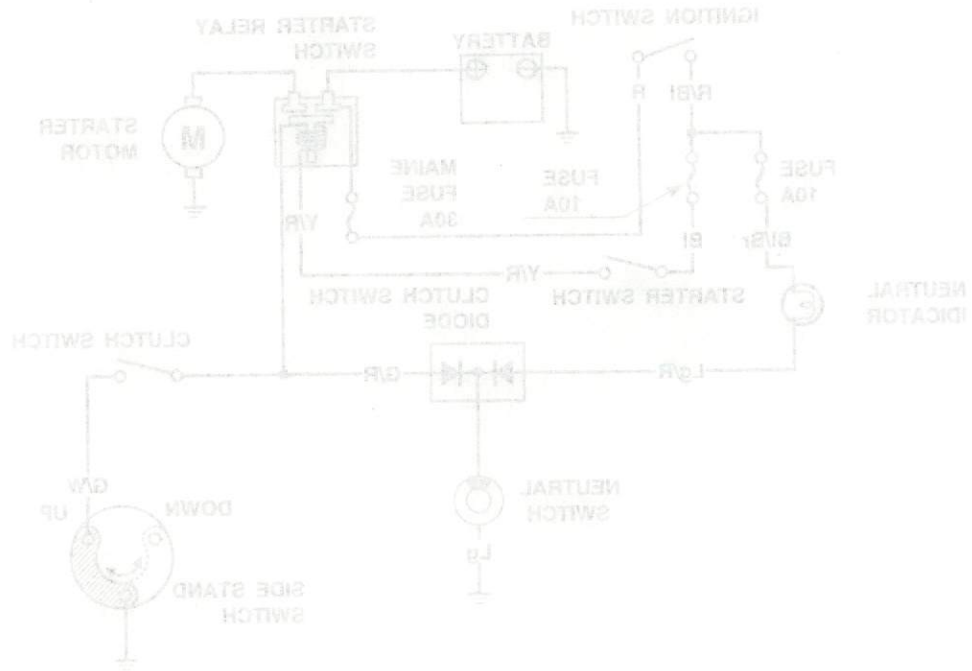


Check the O-ring is in good condition, replace if necessary.
 Apply oil to the O-ring and install the timing hole cap.

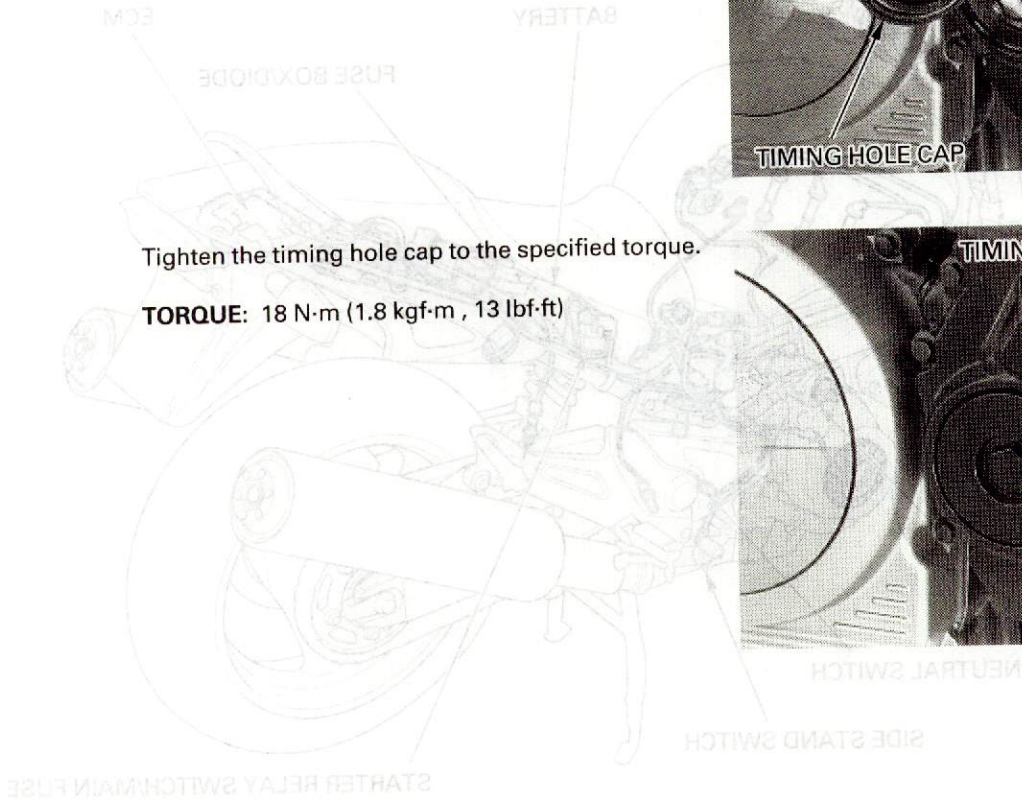

Tighten the timing hole cap to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m , 13 lbf·ft)

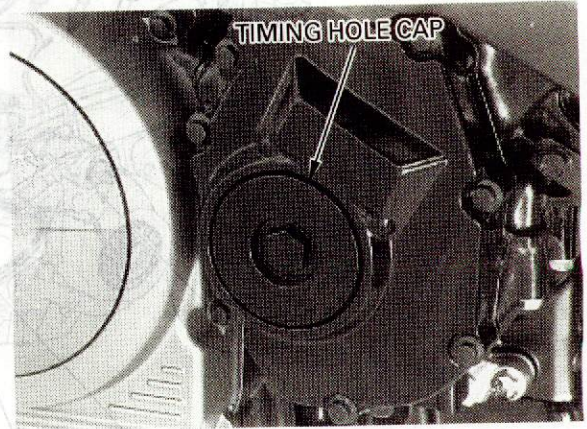

- Rl BLACK
- Y YELLOW
- Br BROWN
- G GREEN
- R RED
- W WHITE
- Lg LIGHT GREEN