



DISASSEMBLY/BULB REPLACEMENT


Remove the screws and combination meter rear cover.

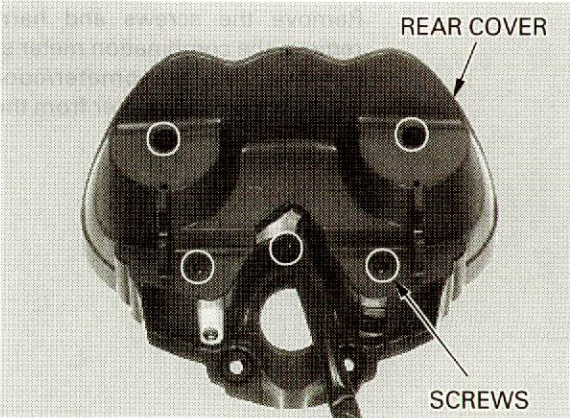

Pull the indicator bulb socket out of the combination meter.
Remove the bulb from the socket and replace it with a new one.

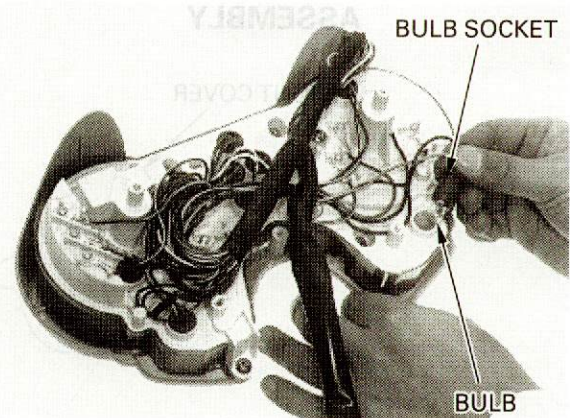

Remove the screws and combination meter front cover.

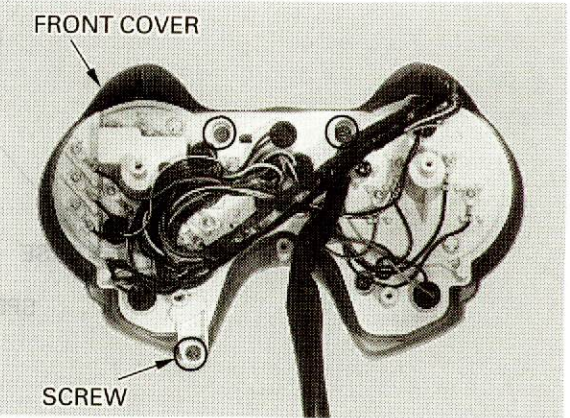

Remove the screws and combination meter front case.

