


## • AIR CLEANER SERVICE




- 4 (1) Remove the right and left side covers.  
(2) Remove the nut and take out the cleaner cover.

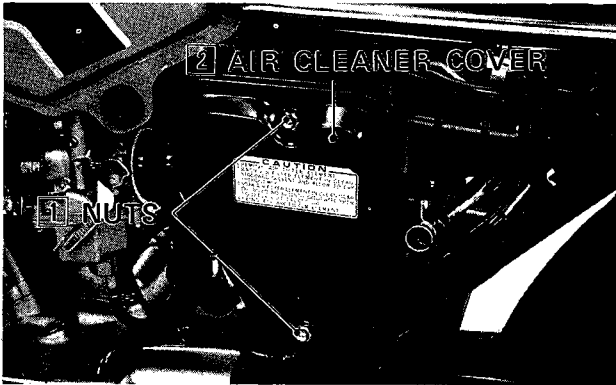

- (3) Remove the element off the case.  
(4) Clean the element in an approved solvent.

## 5 CLEANING SOLVENT

## 6 ELEMENT

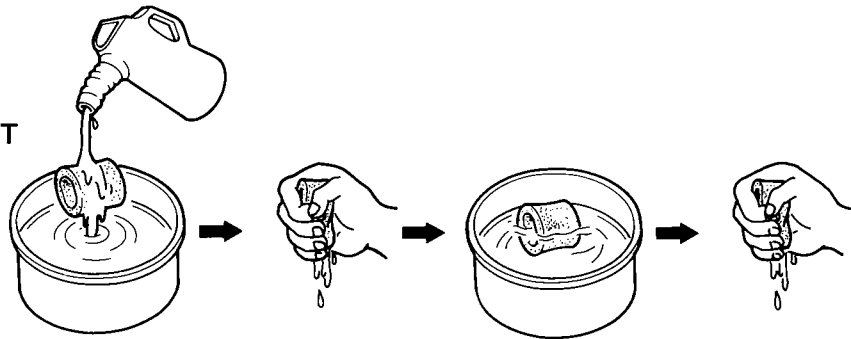

## 7 SQUEEZE TIGHTLY

## 8 GEAR OIL (SAE 80 - 90)

## 9 SQUEEZE TIGHTLY

- 10 **NOTE**  
Do not use gasoline or any other cleaning agents than specified.

## • BATTERY ELECTROLYTE LEVEL AND SPECIFIC GRAVITY CHECKS



- 13
- To compensate for loss of water from electrolyte, fill distilled water up to the "UPPER LEVEL".

### CAUTION

- Fill all cells to the same level.
- Avoid overfilling the battery. Sulfuric acid is very corrosive and will destroy most things with which it comes in contact.

- Specific Gravity Check, Page 258.