


## ● FRONT FORK OIL CHANGING


**1**

- Remove the front brake and clutch cables and remove the handlebars.
- Loosen off the drain bolt and the filler plug.
- Catching oil with an oil pan, etc., drain oil from fork by pumping the front fork.
- Be sure to change oil in both right and left front forks at the same time and same intervals.

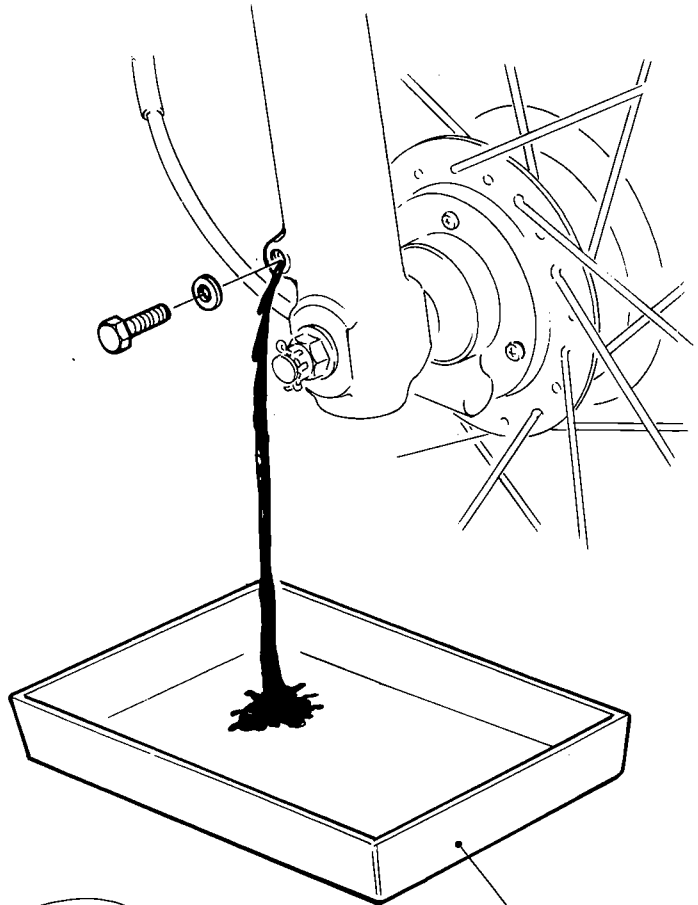

### **3** FORK FILLER PLUG

2.5 – 3.0 kg-m  
(18.1 – 21.7 lbs-ft.)

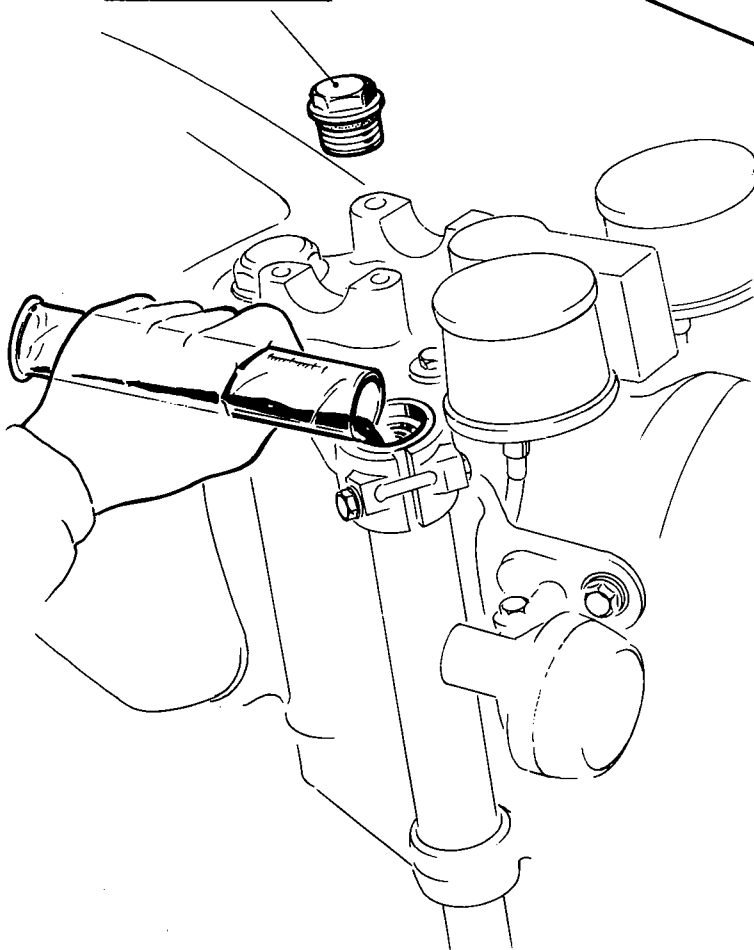

**2** OIL PAN

**4** ATF  
100 – 105 cc (3.53 – 3.70)  
(When replacing)