


a. DISASSEMBLY AND ASSEMBLY

• PISTON


1
NOTE

Place rags between the piston and crankcase to prevent the piston pin clip from falling into the crankcase.

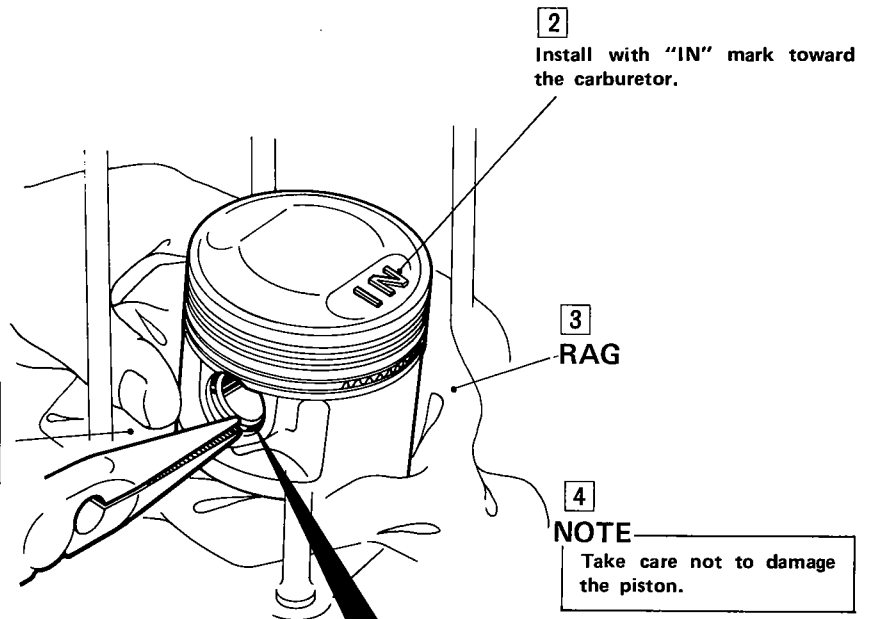

5 PISTON PIN CLIP

NOTE
Install with the piston ring gap away from the cutout.

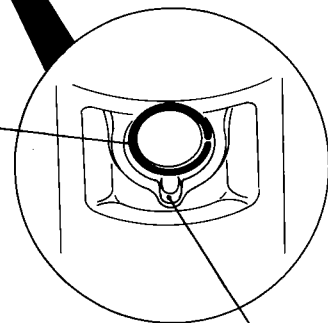

6 CUTOUT

• PISTON RING DISASSEMBLY

7
NOTE

When disassembling and assembling, be sure not to damage the piston.

