


● KICK STARTER ASSEMBLY

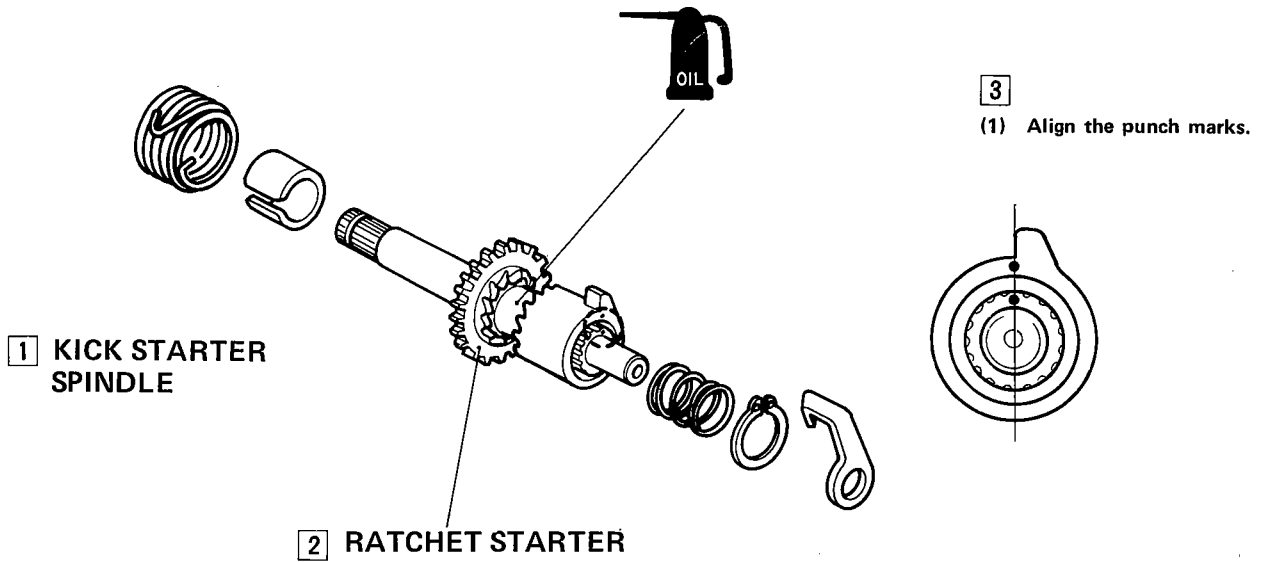

4
(2) Install the starter so that the ratchet guide is positioned in the arrow direction.

5
(3) Hook the end of the spring on the boss of the crankcase.

6 **NOTE**
After assembly, check the operation of the starter.

