

1 WARNING

- Turn the fuel cock to "OFF".
- Drain fuel from the carburetor by removing the drain screw.
- Do not bring an open flame near gasoline. Wipe off spilled gasoline at once.

2 RUBBER CAP

NOTE
Replace if cracked or deteriorated.

3 (2) THROTTLE VALVE

Disassembly and assembly, Page 182.

4 (1) FUEL TUBE

NOTE
Check for any evidences of crack and deterioration, replacing if necessary.

6 (4) INSULATOR

NOTE
Install the insulator with the tab aligned with the slit in the inlet pipe.

5 (5) CHOKE LINK

7 (3) TUBE BAND

8 (6) CARBURETOR BODY

9 MAIN JET
Disassembly and assembly, Page 184.

13 INLET PIPE

12 INSULATOR BAND
NOTE
Place the mark "R" on the right side.

14 THROTTLE STOP SCREW

Adjustment, Page 68.

15 PILOT SCREW

10 FLOAT CHAMBER

16 FLOAT
Disassembly and assembly, Page 184.

17 DRAIN SCREW

11
Clean all the carburetor jets, body, and parts and blow dry with a compressed air. Blow open all passages.

18 After the carburetor has been assembled, perform the following operations:

- Throttle grip free play adjustment Page 68
- Idle speed adjustment Page 68
- Carburetor synchronization Page 70