


• ADJUSTMENT



1


- (1) Self-align the brake by operating the brake lever about 10 times.

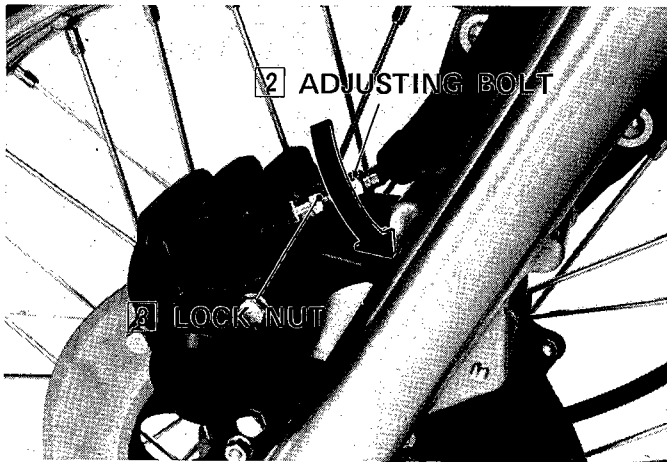

4

- (2) Loosen the lock nut and adjust the brake lever free play with the brake adjuster.

Brake lever free play	10 – 20 mm at end of lever (0.4 – 0.8 in.)
-----------------------	---

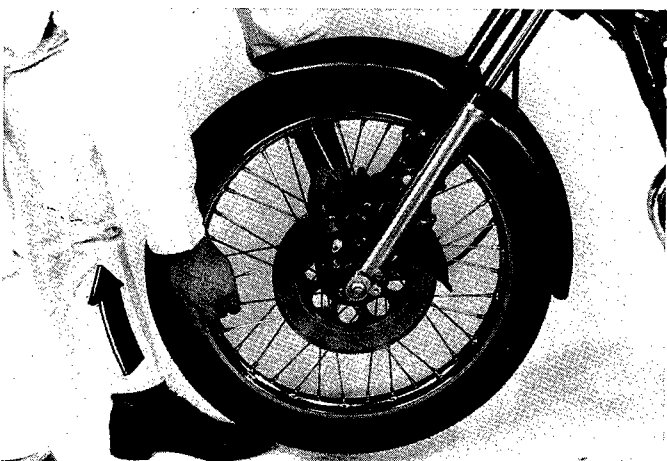

5

- (3) Check the wheel for dragging; brake for operation.