

## 7. ELECTRICAL SYSTEM

### Fuses

Three fuses are placed in the fuse box and they are easily checked by opening the seat. The main fuse is 15A fuse and the sub-fuses are 7A fuses, one for the headlight and the other for the position lamp, taillight and meter lamp, to make it easier to find circuit failure. Even if the 7A fuses are burnt down, as long as the 15A fuse is normal, the horn, turn signals, ignition switch and stop switches are operated properly. However, it is recommended that the cause be located before the damaged fuses is replaced.

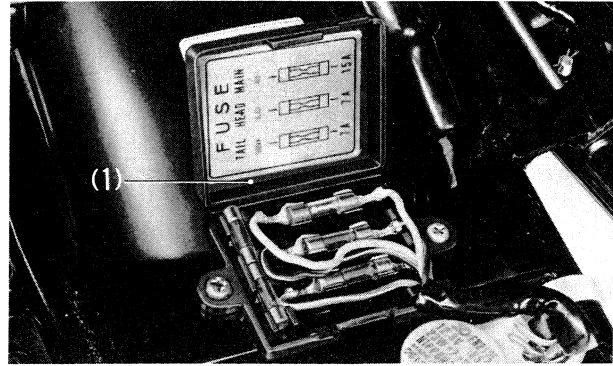


Fig. 2-29 (1) Fuse box

MEMO