



- (5) Remove the change pedal and left crankcase rear cover.

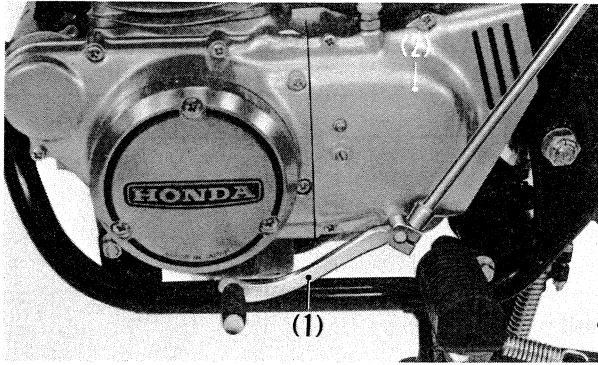

(1) Change pedal (2) Left crankcase rear cover


- (6) Remove the drive chain with the drive sprocket.
* Remove the drive sprocket fixing bolts.

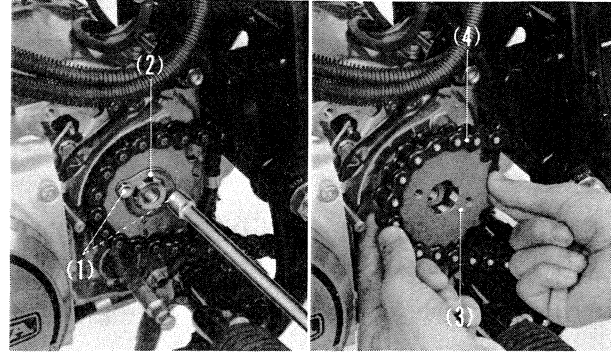

(1) Drive sprocket fixing bolts (2) Fixing plate
(3) Drive sprocket (4) Drive chain (endless)

- (7) Drain the carburetor and loosen the connecting tube band.


* Remove the drain screw and drain gasoline.
Keep out of fire.

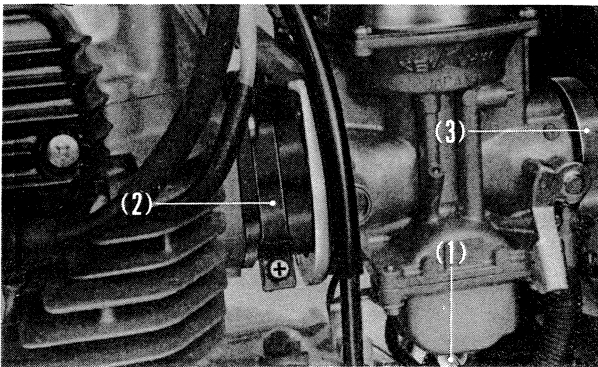

(1) Drain screw (2) Connecting tube band
(3) Carburetor insulator band


- (8) Remove the carburetor.

* Disconnect the carburetor at the insulator side and push it toward the air cleaner. Then remove the carburetor toward left by lowering it.

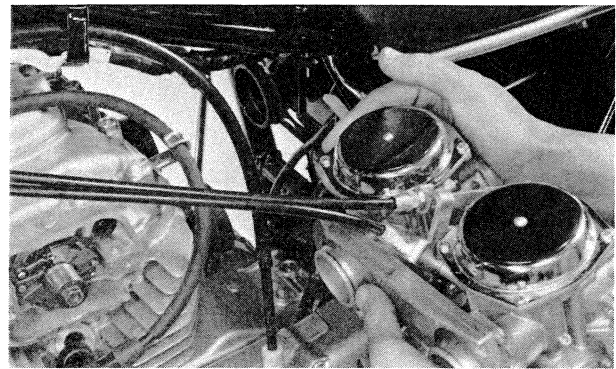

- (9) Remove the A.C. generator connector.


* Pull out the starting motor cable.

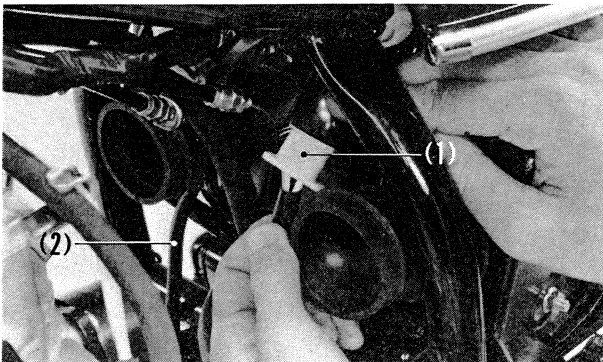

(1) A.C. generator connector (2) Starting motor cable

- (10) Remove the brake pedal.

* Remove the bolt and brake pedal pivot shaft and remove the pedal.

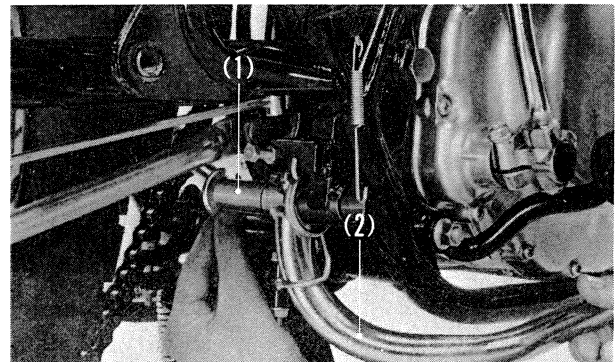

(1) Brake pedal pivot shaft (2) Brake pedal