

Disassembly

1. Drain the engine.
2. Remove the right exhaust muffler. (On CB type only)
3. Remove the right foot peg.
4. Remove the kick starter pedal.
5. Remove the 6 mm screws and remove the right crankcase cover.
Place an oil pan in position to collect oil.

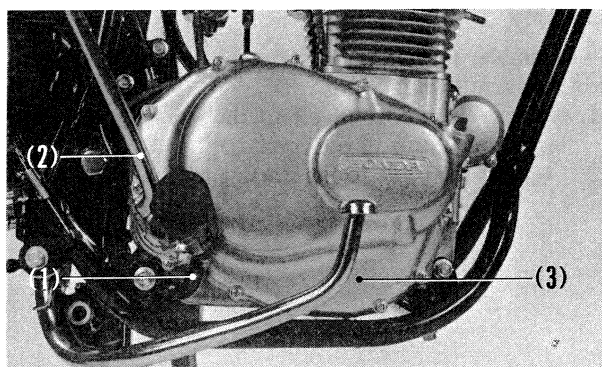


Fig. 4-50 (1) Right foot peg
(2) Kick starter pedal
(3) Right crankcase cover

6. Remove the bolts (2) and remove the clutch springs and clutch pressure plate. Then the clutch friction discs and clutch plates B can be removed.

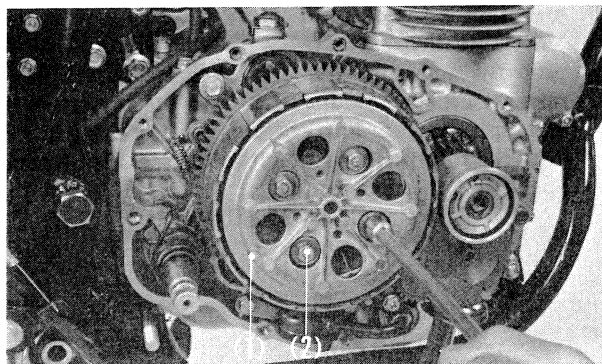


Fig. 4-51 (1) Clutch pressure plate

7. Remove the clutch lifter joint piece and 25 mm external snap ring. Then the clutch center can be removed.

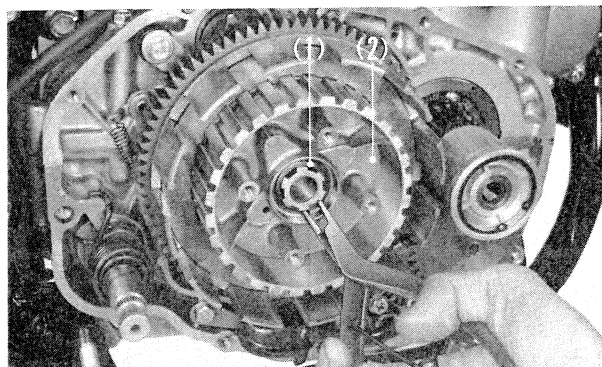


Fig. 4-52 (1) 25 mm external snap ring
(2) Clutch center

8. Remove the clutch outer after removing the oil filter rotor. (See page 50)

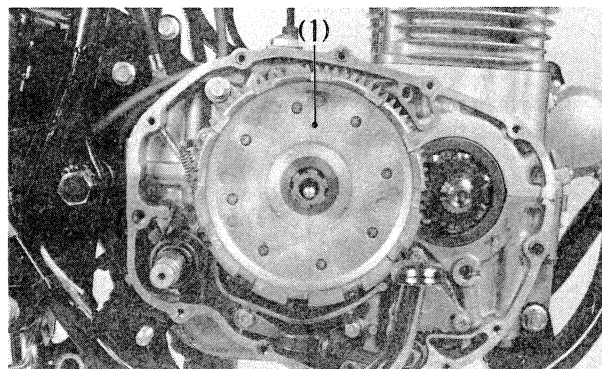


Fig. 4-53 (1) Clutch outer