

2. Straighten the locking lugs of the lock washer and loosen the bolt (2).  
Then remove the connector joint from the left carburetor.
3. Remove the four screws and remove the carburetor assembly from the stay plate.

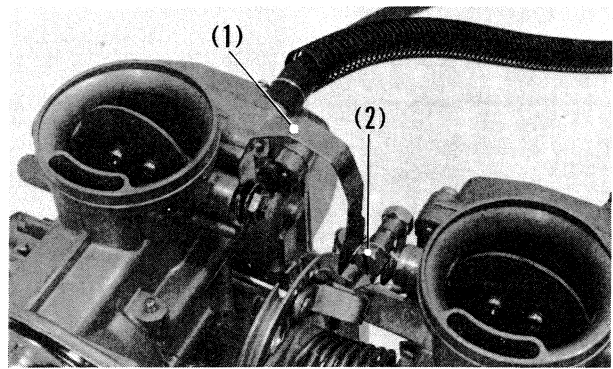


Fig. 4-105 (1) Connector joint  
(2) Bolt

### Installation

To install, reverse the removal procedures.

1. Connect the right and left carburetors by the connector joint. Tighten the lock nut and bend the locking lugs of the lock washer securely.
2. Set the throttle lever to the stop screw (1) as shown.
3. Install the coil spring in the position shown and install the carburetor assembly to the stay plate.

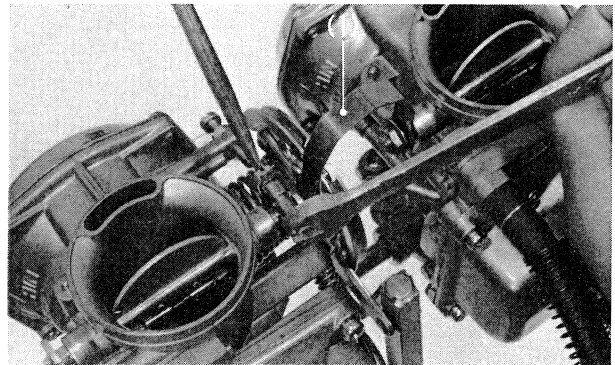


Fig. 4-106 (1) Connector joint

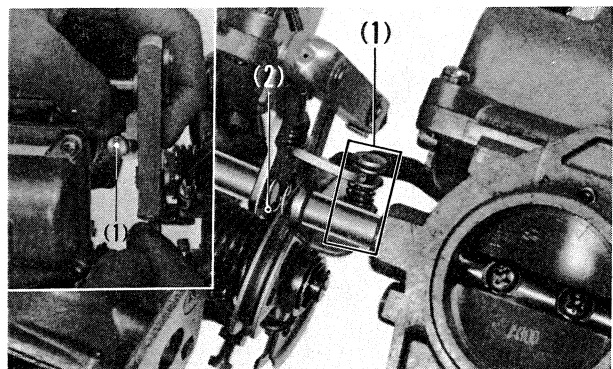


Fig. 4-107 (1) Stop screw  
(2) Spring

4. Connect the throttle cables with the throttle fully closed. Screw the "closed" side cable in the lower part of the throttle lever. Insert the "open" side cable into the upper part of the lever, adjust the length and lock with the lock nut.

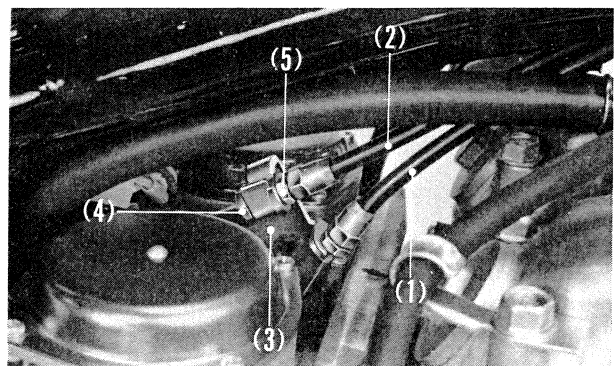


Fig. 4-108 (1) "Closed" side cable (4) Lock nut  
(2) "Open" side cable (5) Adjusting nut  
(3) Throttle lever