

- Remove the screw (1) and remove the valve seat plate and valve seat.

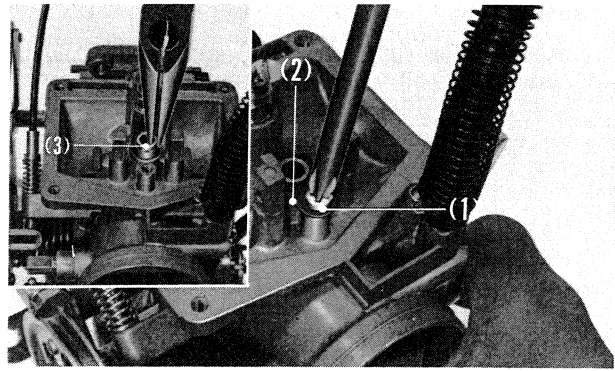


Fig. 4-113 (1) Screw
(2) Valve seat plate
(3) Valve seat

- Remove the clips (1) and (2). Straighten the locking lugs of the lock washer and remove the holding bolt. Remove the throttle lever together with the adjusting holder.

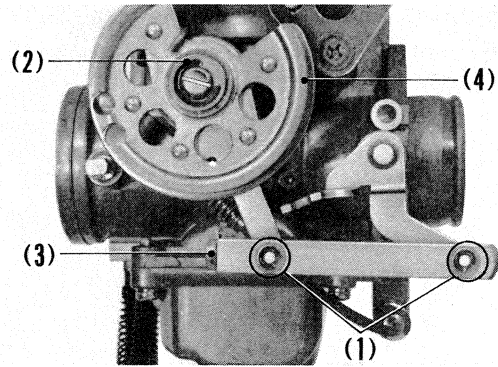


Fig. 4-114 (1), (2) Clips
(3) Holding bolt
(4) Throttle lever
(5) Adjusting holder

Inspection

- Blow the jets to check for clogging.
- Check the float valve for proper operation.
- Check the sliding surface of the vacuum piston for scores or scratches.
- Check the jet needle for wear, scores, or scratches.

Carburetor Setting Table

	CB250	CB360	CL360
Setting mark	744B	745B	747B
Main jet	Primary	# 68	
	Secondary	# 95	# 68
Air jet	Primary	# 150	
	Secondary	# 50	
Slow jet		# 35	
Slow air jet		# 85	
Float height	18.5 mm (0.75 in.)		

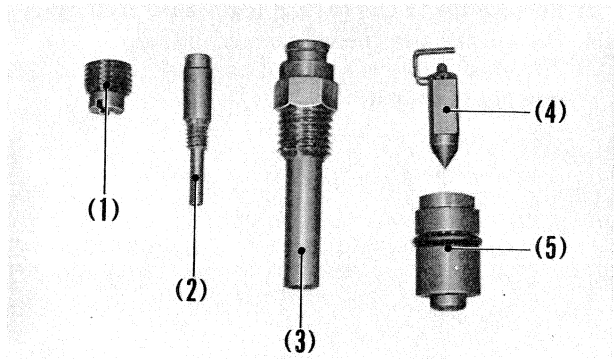


Fig. 4-115 (1) Primary main jet (5) Valve seat
(2) Slow jet
(3) Needle jet holder
(4) Float valve