

- Remove the two 8 mm nuts from the right and left front forks. Remove the axle holders. The front wheel can now be taken out from the motorcycle.

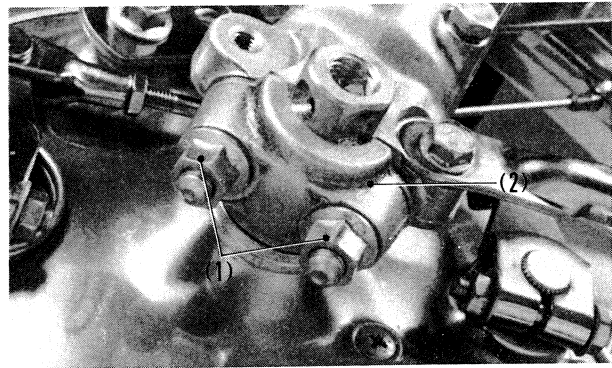


Fig. 5-15 (1) 8 mm nuts  
(2) Axle holder

- Remove the front axle sleeve and withdraw the front wheel axle. Remove the front brake panel from the front wheel.

### Inspection

Refer to the service data on page 113.

- Inspection items on page 69.
- Measure the inside diameter of the front brake drum.
- Measure the thickness of the front brake shoe.

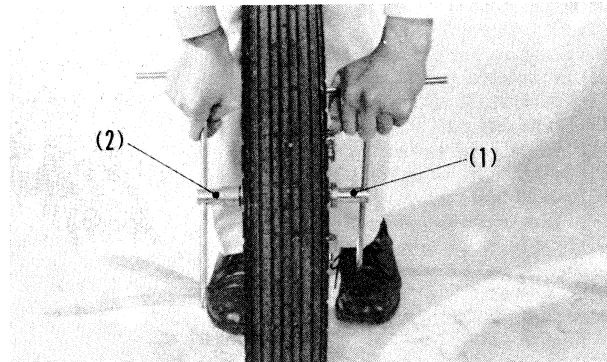


Fig. 5-16 (1) Front axle sleeve  
(2) Front wheel axle

### Assembly

- Install the front brake shoes to the brake cams. Install the front anchor pin washers. Secure them with cotter pins.

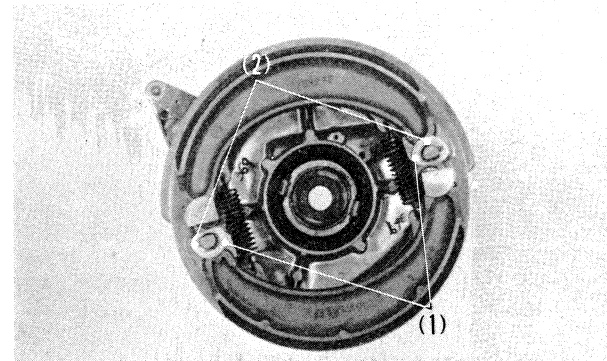


Fig. 5-17 (1) Anchor pin washers  
(2) Cotter pins

- Install the front brake arms "A" and "B", being careful that the marks align.

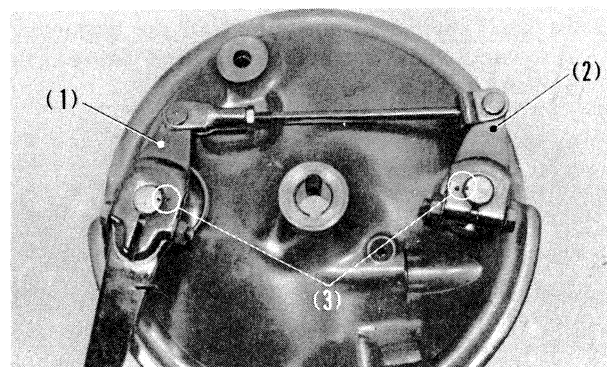


Fig. 5-18 (1) Front brake arm A  
(2) Front brake arm B  
(3) Marks