

3. REAR WHEEL AND REAR BRAKE

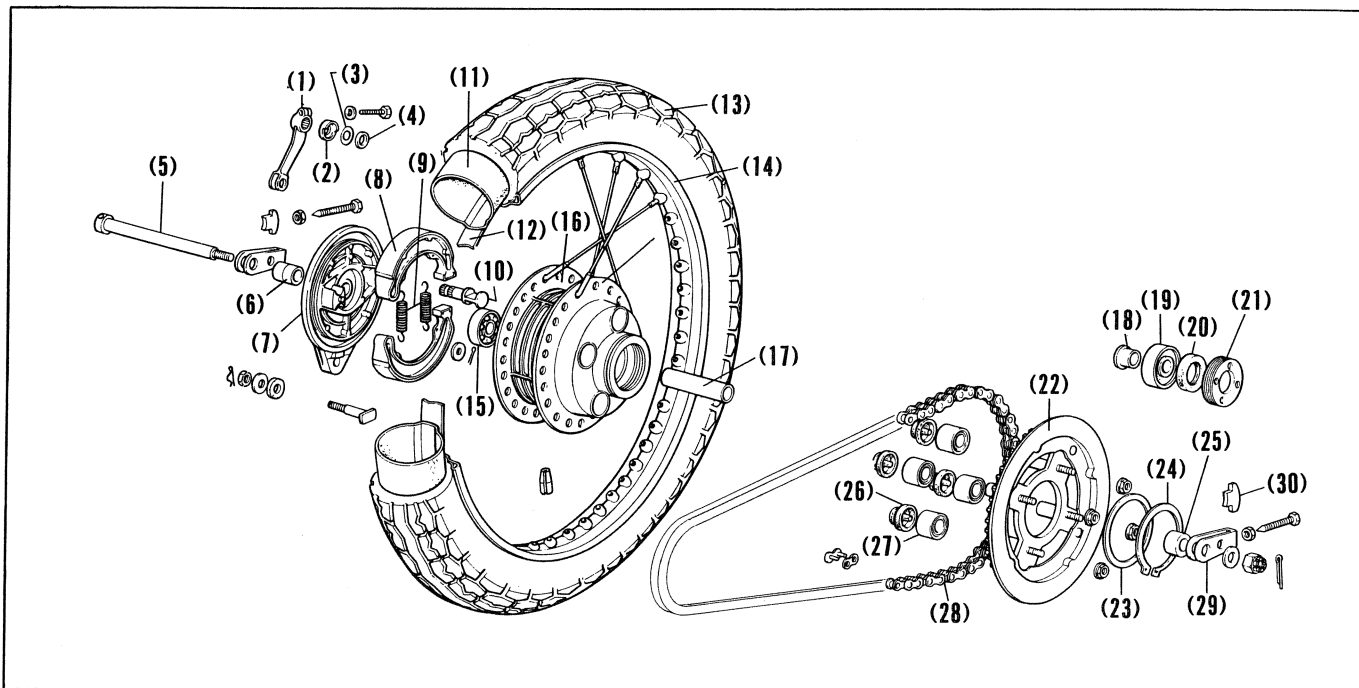


Fig. 5-35 (1) Rear brake arm (2) Brake indicator plate (3) 14 mm plain washer (4) Brake cam dust seal (5) Rear wheel axle (6) Rear brake panel side collar (7) Rear brake panel (8) Rear brake shoe (9) Rear brake shoe spring (10) Rear brake cam (11) Rear wheel tube (12) Tire flap (13) Rear wheel tire (14) Rear wheel rim (15) 6303U radial ball bearing (16) Rear wheel hub (17) Rear axle distance collar A (18) Rear axle distance collar B (19) 6304U radial ball bearing (20) Dust seal (21) Bearing retainer (22) Final driven sprocket (23) 70 mm washer (24) 69 mm snap ring (25) Rear wheel side collar (26) Rear wheel hub plug (27) Rear wheel damper bushing (28) Drive chain (29) Drive chain adjuster (30) Chain adjuster stopper

Disassembly

1. Remove the mufflers. (CB type only)
2. Remove the rear brake rod and rear brake stop arm from the brake panel.
3. Loosen the right and left chain adjuster lock nuts and chain adjuster bolts. Pull out the cotter pin and remove the axle nut.
4. Pull out the rear wheel axle. Remove the drive chain from the final driven sprocket. Remove the rear wheel with the brake panel.

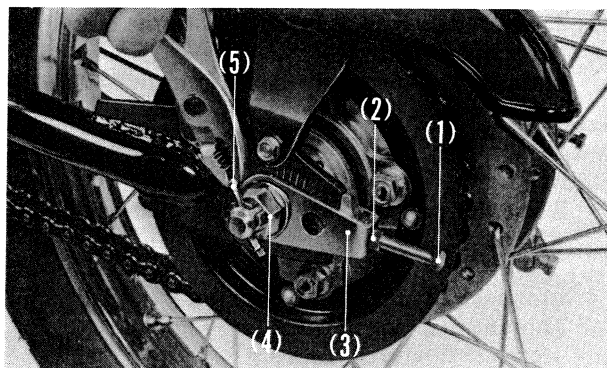


Fig. 5-36 (1) Chain adjuster bolt (2) Lock nut (3) Chain adjuster (4) Axle nut (5) Cotter pin

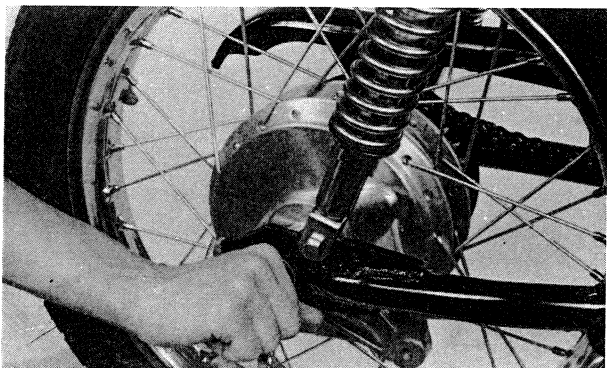


Fig. 5-37