

Fuel valve and fuel tank cap

1. Drain the fuel tank and remove it.
2. Remove the fuel strainer cup, O-ring and strainer screen in this order. Remove the 6 mm screw and remove the fuel valve from the fuel tank.
3. Remove the 3 mm screws and remove the fuel valve lever set plate and valve lever.
4. Remove the fuel valve gasket.
5. To install, reverse the removal procedures.
6. Connect the fuel tubes and hold them securely with the clips.
7. Check the following items.
 - * Contamination of fuel strainer screen
 - * Weakness of fuel valve lever spring
 - * Clogging of vent in fuel tank cap

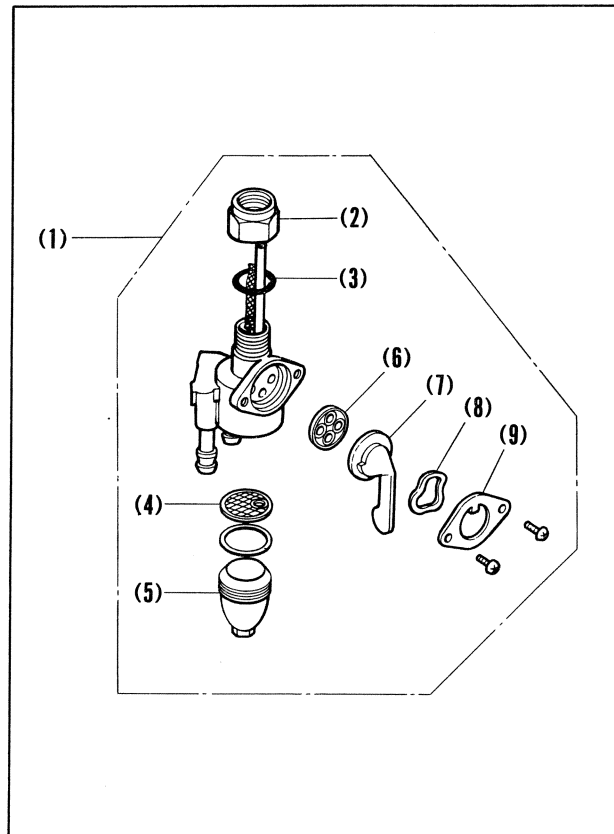


Fig. 5-84 (1) Fuel valve Assy. (6) Valve gasket
 (2) Valve joint nut (7) Valve lever
 (3) Joint ring (8) Valve lever spring
 (4) Screen (9) Valve lever set plate
 (5) Fuel strainer cup

Air cleaner

1. Open the seat and remove the right and left side covers.
2. Remove the nut (2), bolt (3) and screw (4) and remove each air cleaner case.
3. Separate each air cleaner element from the air cleaner case.

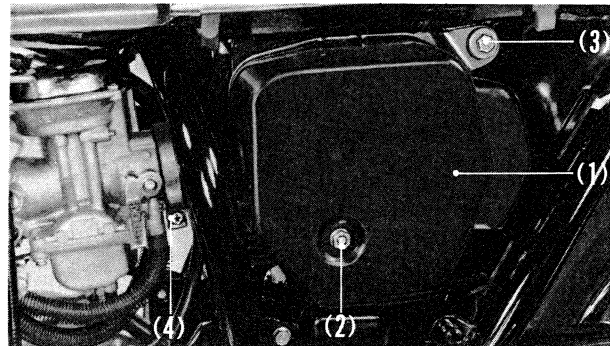


Fig. 5-85 (1) Air cleaner case

4. Clean the air cleaner elements.

Give a light tap to the air cleaner element to remove dirt and dust. If necessary, direct a blast of compressed air at the inner surface to blow off dirt and dust completely.

CAUTION:

If the air cleaner elements become oily or if they are broken, replace.

5. To install, reverse the removal procedures.

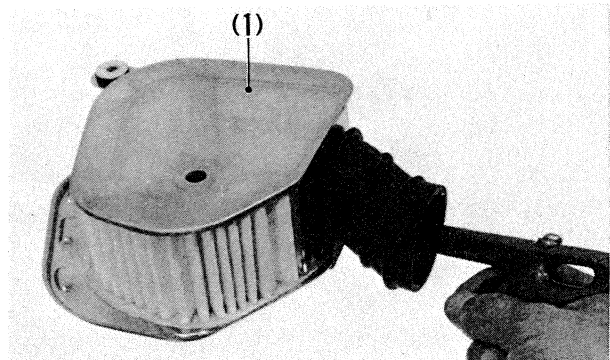


Fig. 5-86 (1) Air cleaner element