

**Battery box and tool box**

1. Remove the air cleaner assembly.
2. Remove the battery.
3. Disconnect the starting motor cable.
4. Disconnect the electrical part wires at the battery box.
5. Remove the three bolts (2) and the battery box can be removed.
6. Remove the electrical parts.

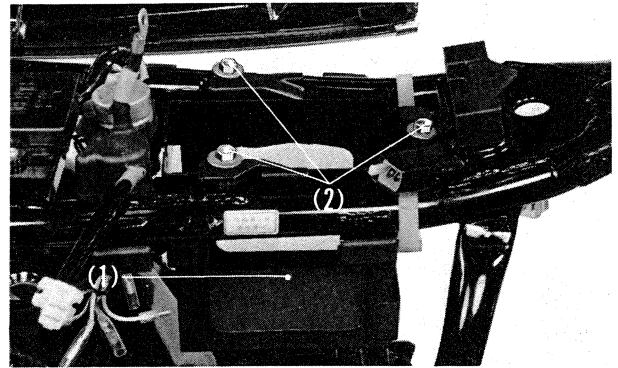


Fig. 5-87 (1) Battery box (2) Bolts

7. Remove the four bolts (2) and remove the tool box.
8. To install, reverse the removal procedures.  
Install the electrical parts and connect the wires as shown in Fig. 5-89 below.

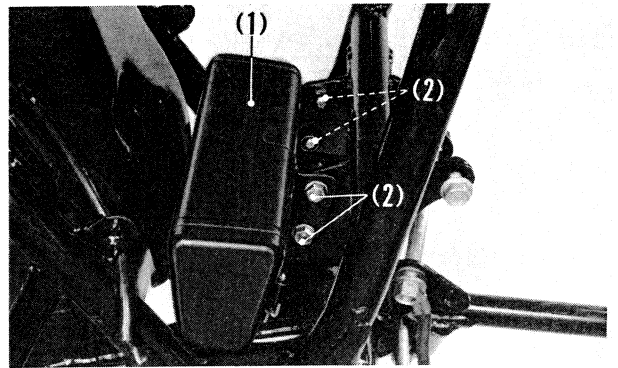


Fig. 5-88 (1) Tool box (2) Bolts

Fig. 5-89

- (1) Fuse box
- (2) Fuse box leads
- (3) Flasher relay
- (4) Wire harness
- (5) Starting magnetic switch
- (6) Starting motor cable
- (7) Battery case
- (8) Silicon rectifier

