

4. Remove the bolt (1) and remove the kick starter pedal.
5. Remove the brake pedal spring.

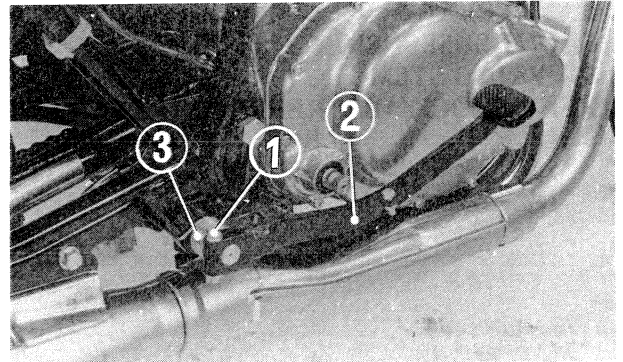


Fig. 19 (1) Bolt
(2) Kick starter pedal
(3) Brake pedal spring

6. Remove the brake adjusting nut, then remove the rear brake arm joint and brake rod spring.
7. Remove the rear brake pivot shaft from the frame.

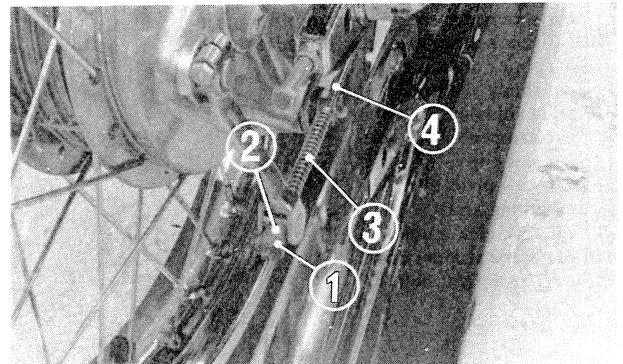


Fig. 20 (1) Brake adjusting nut
(2) Rear brake arm joint
(3) Brake rod spring
(4) Brake rod

Assembly

Assembly is the reverse of the removal. However, observe the following assembly notes:

1. Install the brake pedal spring with the end hooked on the pedal bracket as shown.
2. Align the punch mark on the pivot shaft with that on the brake pedal; then, tighten the pedal securely.
3. Adjust the rear brake pedal play and height.
4. To adjust, follow the instructions given on page 28.

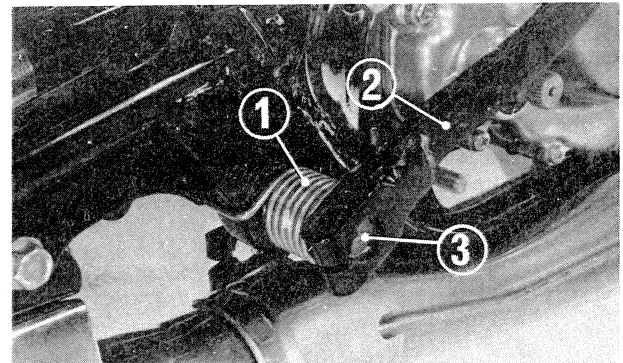


Fig. 21 (1) Brake pedal spring
(2) Brake pedal
(3) Pivot shaft

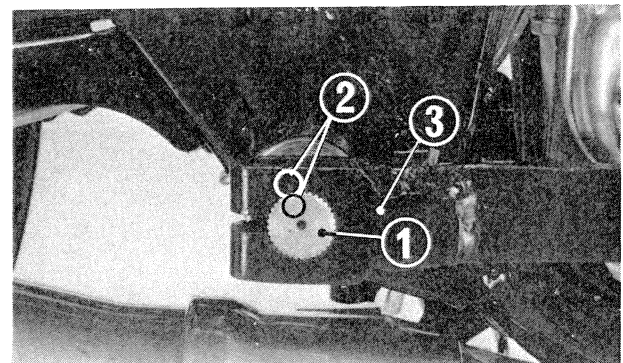


Fig. 22 (1) Pivot shaft
(2) Punch mark
(3) Rear brake pedal