

4. Remove the nuts (3) and bolts (4) to remove the rear bumper and rear shock absorbers.

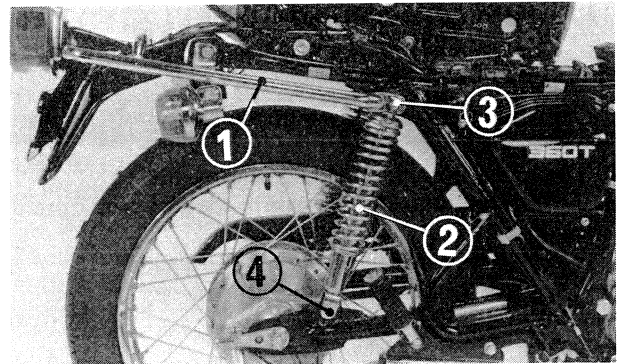


Fig. 26 (1) Rear bumper  
(2) Rear shock absorber  
(3) Nut  
(4) Bolt

5. Remove the chain guard.
6. Pry off the cotter pin and remove the axle nut.
7. Loosen the right and left drive chain adjuster lock nuts and loosen the adjusting bolts.

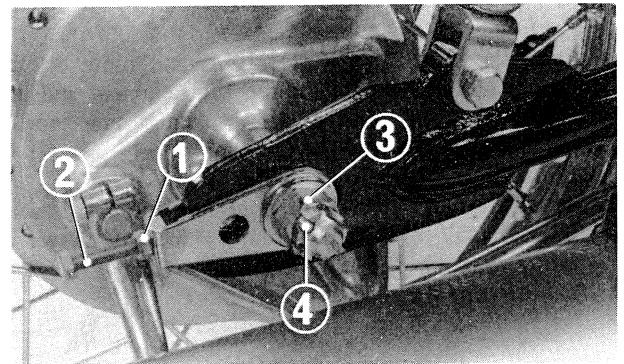


Fig. 27 (1) Lock nut  
(2) Adjusting bolt  
(3) Axle nut  
(4) Cotter pin

8. Remove the rear brake stopper arm from the brake panel.
9. Remove the rear brake adjusting nut and disconnect the brake rod from the brake arm.
10. While pushing the rear wheel forward, remove the drive chain from the driven sprocket.
11. Withdraw the rear wheel axle and remove the rear wheel.

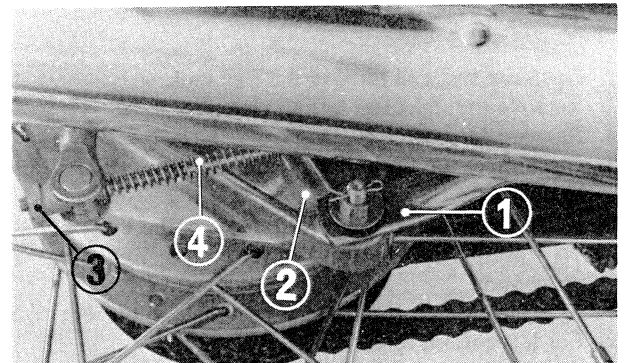


Fig. 28 (1) Brake panel  
(2) Rear brake stopper arm  
(3) Rear brake adjusting nut  
(4) Brake rod

12. Back off the 14 mm self-locking nut; and, remove the swing arm pivot bolt and rear fork in the swing arm.
13. Remove the rear brake stopper arm from the swing arm.
14. For inspection, refer to page 91.
15. To assemble, reverse the disassembly procedure.
16. Replace the rear axle cotter pin with a new one.

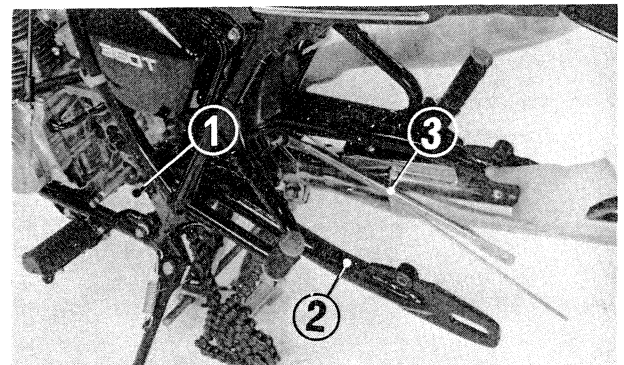


Fig. 29 (1) Swing arm pivot bolt  
(2) Swing arm  
(3) Rear brake stopper arm