

3. Muffler

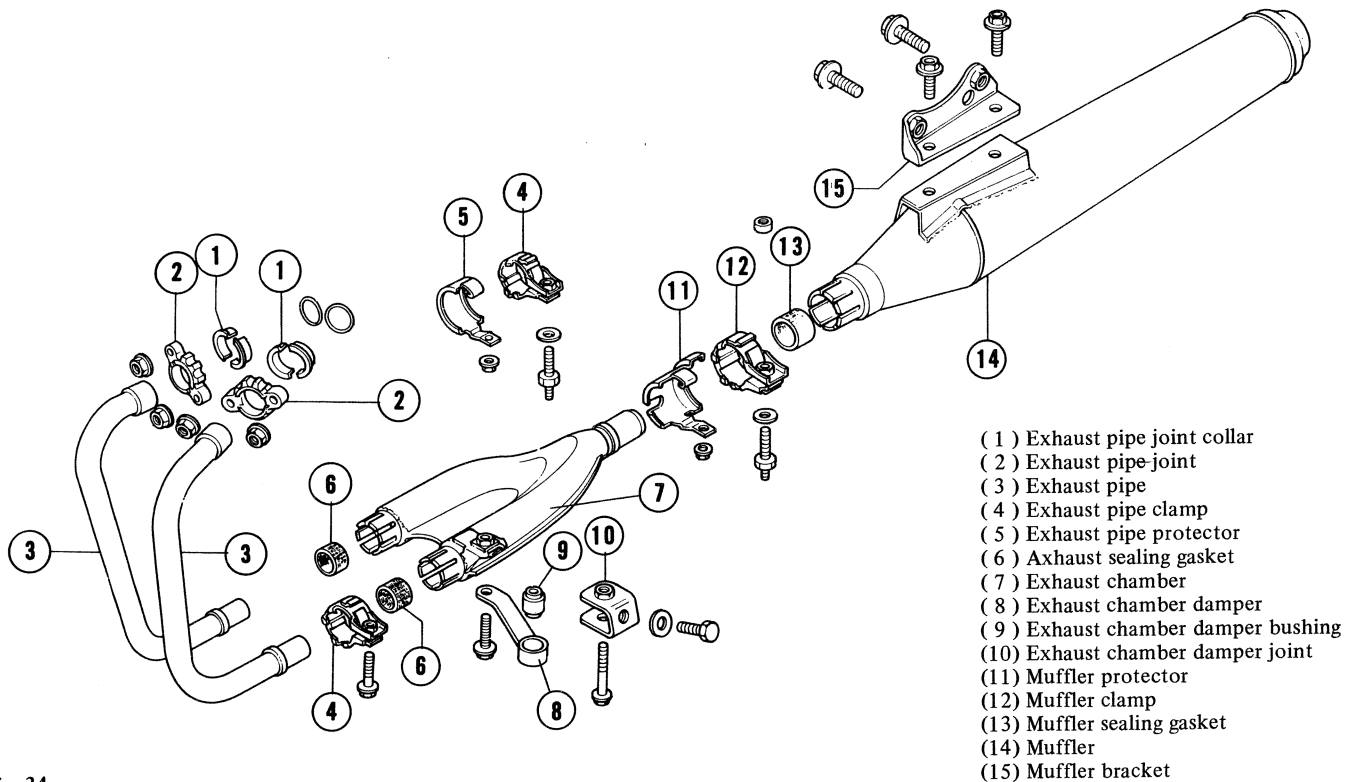


Fig. 34

Disassembly

1. Remove the two bolts (1) and take out the muffler.

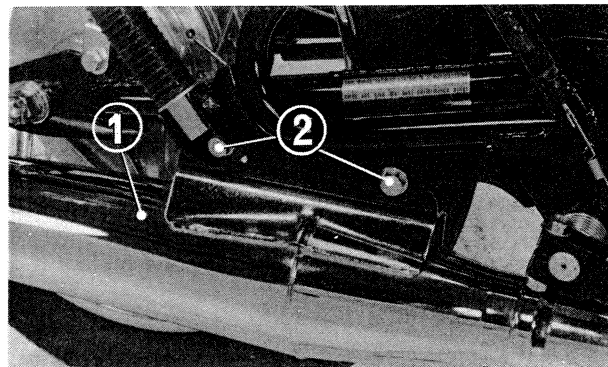


Fig. 35 (1) Muffler
(2) Bolt

2. Remove the exhaust chamber damper by removing the bolt (1).

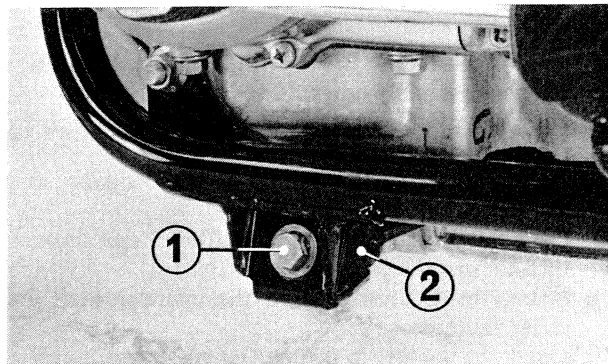


Fig. 36 (1) Bolt
(2) Exhaust chamber damper