

TOOLS

- The tools for the ball bearing removal and installation are not contained in this list. Refer to section 1, Ball Bearing Replacement, of the Common Service Manual.
- The newly designed tools are indicated with \* mark in the list.

Description	Tool number	Alternative tool	Ref. section(s)
Oil filter wrench	07HAA—PJ70100		3
Vacuum gauge	07404—0030000		3
Oil pressure gauge	07506—3000000	] or equivalent commercially available in U.S.A.	4
Oil pressure gauge attachment	07510—4220100		4
Rotor holder	07725—0040000		4, 14, 16
Antifreeze tester	Commercially available		5
Cooling system tester	Commercially available		5
Float level gauge	07401—0010000		6
Vacuum pump	ST—AH—260—MC7	—U.S.A. only	6
Pressure pump	ST—AH—255—MC7	—U.S.A. only	6
* Valve guide driver (guide removal/ installation)	07JMD—KY20100		8
* Valve bucket hole protector	07JMG—KY20100		8
Valve spring compressor	07757—0010000		8
* Valve spring compressor attachment	07JME—KY20100		8
* Valve guide reamer, 3.8 mm	07JMH—KY20100	—07JMH-KY2010A (U.S.A. only)	8
Valve seat cutter, 22 mm (45° IN, EX)	07780—0010701	] or equivalent commercially available in U.S.A.	8
Valve flat cutter, 22 mm (32° IN)	07780—0012601		8
Valve flat cutter, 21.5 mm (32° EX)	07780—0012800		8
Valve interior cutter, 22 mm (60° IN, EX)	07780—0014202		8
* Cutter holder	07JMH—KY20200		8
Piston ring compressor	07954—2500000	—07954—2350000	8
Piston base	07958—4130000	—07958—2500001 (U.S.A. only)	8
Compression gauge	07305—0010000	] or equivalent commercially available in U.S.A.	8
* Compression gauge attachment	07JMJ—KY20100		8
* Clutch center holder	07GMB—KT80100	—Not available in U.S.A. 07HGB—001000A (U.S.A. only)	9