

## FUEL TANK REMOVAL/ INSTALLATION

**▲ WARNING**

- Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

Remove the seat (page 2-2).

Turn the fuel valve OFF.

Remove the fuel tank mounting bolts and lift the tank up. Disconnect the tubes, and remove the fuel tank.

Install the fuel tank in the reverse order of removal.

After installation, turn the fuel valve ON and check the fuel line for leakage.

Install the seat (page 2-2).

