


FRONT WHEEL DISASSEMBLY/ASSEMBLY

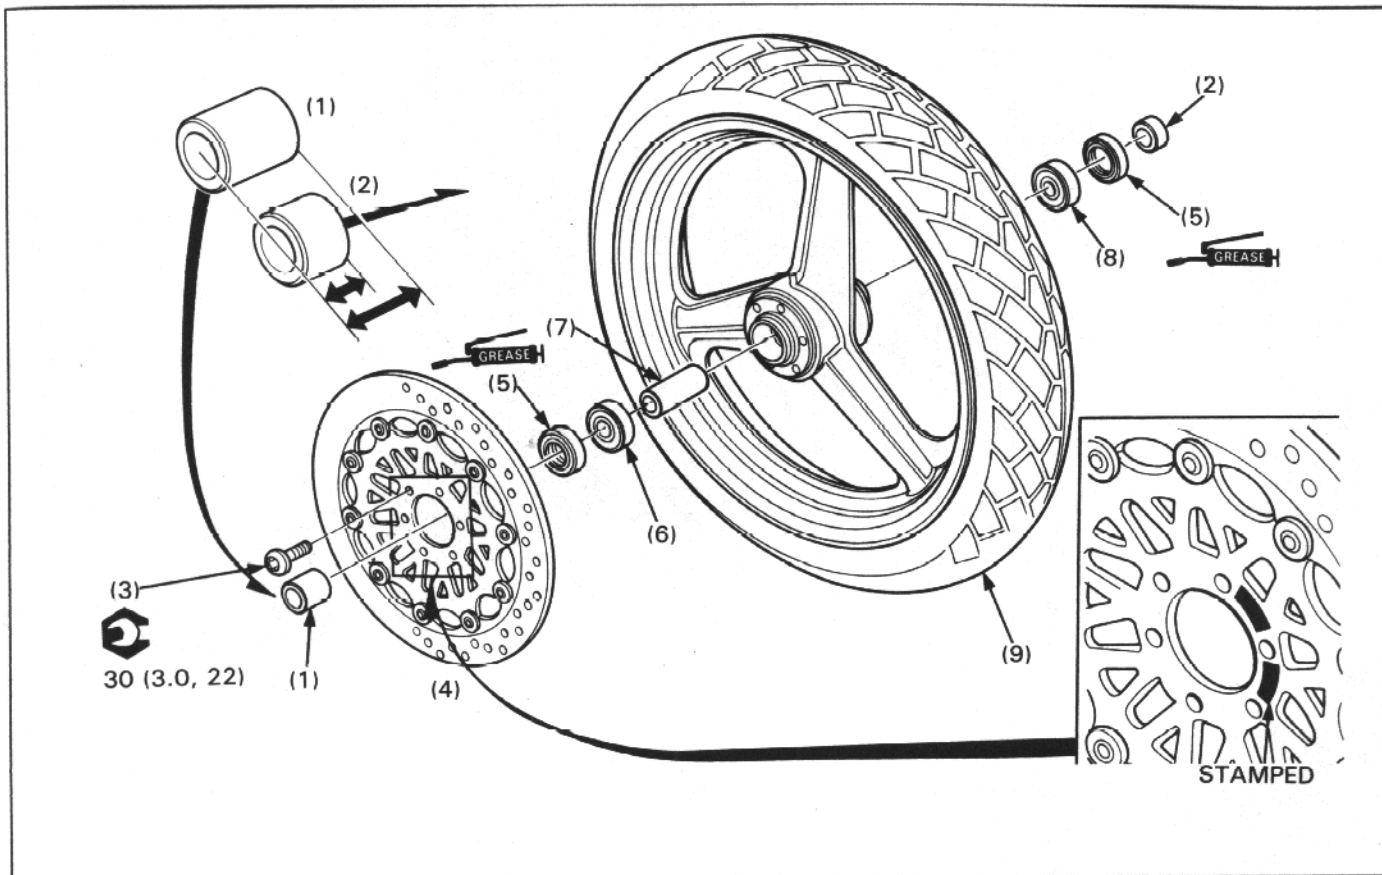

⚠ WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE

- Always replace wheel bearings as a set.
- For wheel bearing replacement, refer to the section 1 of the Common Service Manual.

REQUISITE SERVICE

- Front wheel removal/installation (page 11-4)

PROCEDURE		Q'ty	ASSEMBLY REMARKS
DISASSEMBLY ORDER			• Assembly is in the reverse order of disassembly.
(1)	Right side collar	1	Longer collar
(2)	Left side collar	1	Shorter collar
(3)	Brake disc bolt	6	Wipe off all the grease on the bolt surface.
(4)	Brake disc	1	Install with the stamped side outward as shown.
(5)	Dust seal	2	Apply grease to the dust seal lips and install them with the lip side facing inside.
(6)	Right wheel bearing (6004 UU)	1	
(7)	Distance collar	1	
(8)	Left wheel bearing (6004 UU)	1	NOTE: • Drive in the left side bearing first, then the right side bearing.
(9)	Front wheel/tire	1/1	