

REMOVAL


Remove the exhaust pipe (page 2-5).

Disconnect the following:

- PAIR control valve vacuum tube
- Secondary air tubes


Remove the three bolts and PAIR control valve assembly.

Disconnect the air suction tube from the PAIR control valve.

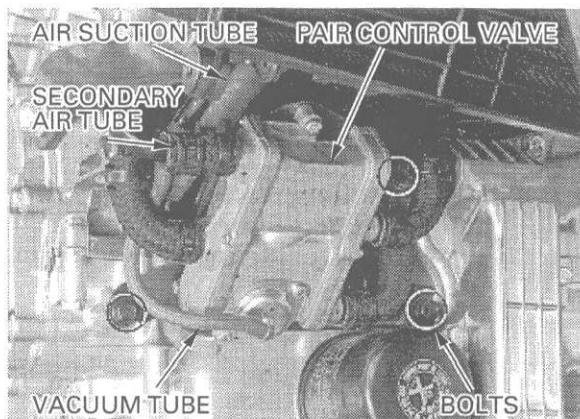

Remove the nuts and secondary air tubes from the cylinder head.

Remove the gaskets.

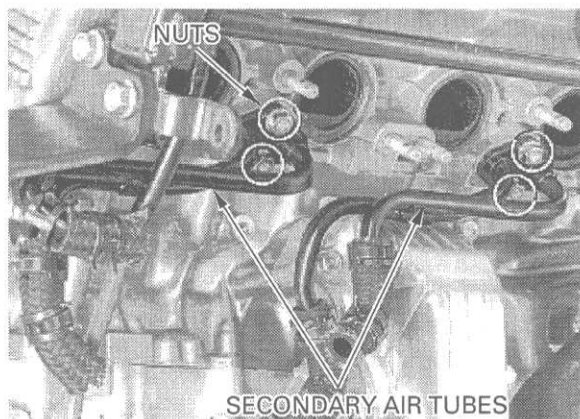

INSTALLATION

Install the new gasket onto the secondary air ports.



Install the secondary air supply tubes to the cylinder head, tighten the four nuts securely.

