



Check the diaphragm for tears or other damage.

NOTE:


Replace the diaphragm cover, spring, diaphragm and spacer as a set.

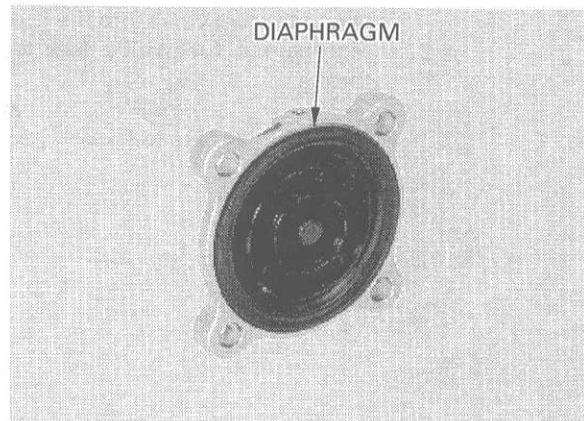

Loosen the lock nut and remove the fuel valve assembly from the fuel tank.

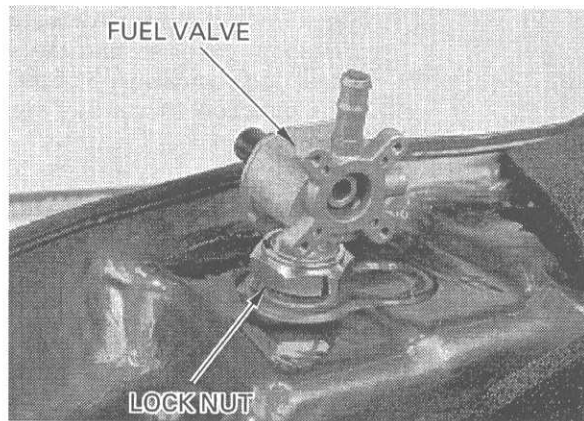

Remove the fuel strainer and O-ring from the fuel valve.
Clean the fuel strainer with compressed air.

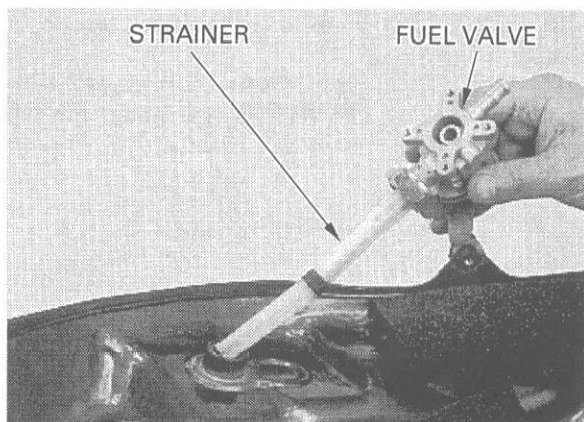

ASSEMBLY

Install a new O-ring and fuel strainer onto the fuel valve.

