



COOLING SYSTEM

Install the fan motor onto the shroud and tighten the three flange nuts.

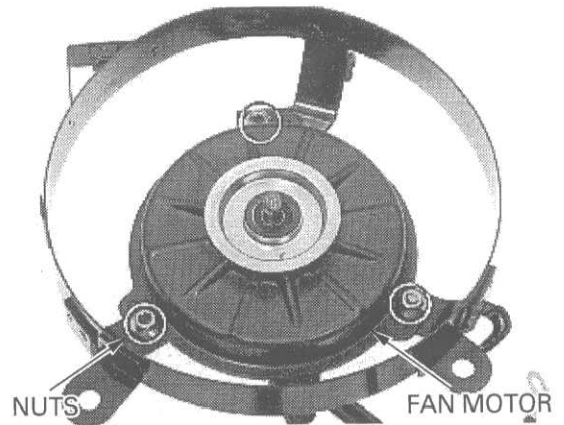


Install the cooling fan onto the fan motor shaft by aligning the flat surfaces.

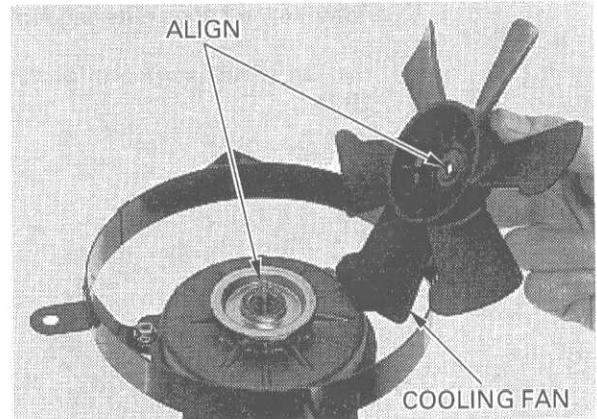

Apply a locking agent to the cooling fan nut threads. Install and tighten the nut to the specified torque.

TORQUE: 3 N·m (0.28 kgf·m , 2.0 lbf·ft)

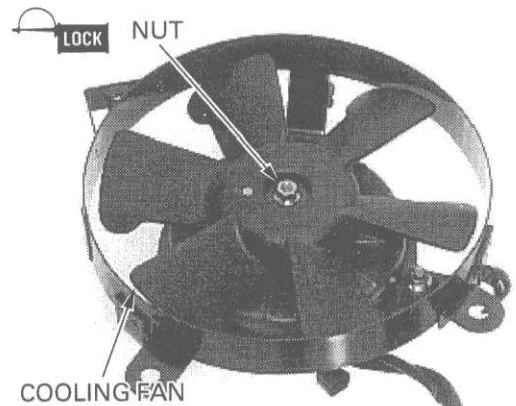

Install the fan motor/shroud assembly onto the radiator. Route the fan motor switch cord and ground eyelet properly. Install and tighten the three mounting bolts.

Route the sub-harness, and connect the fan motor switch cord to the switch as shown. Clamp the sub-harness to the wire clamp.

