


## ENGINE REMOVAL/INSTALLATION

Remove the terminal nut and starter motor cable from the starter motor.  
Remove the starter motor mounting bolt and ground terminal.

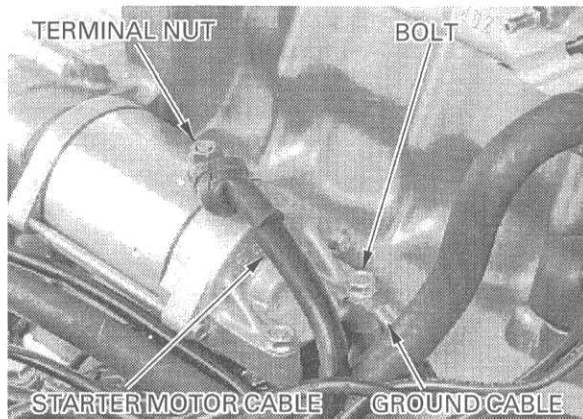


Disconnect the following connectors:

- Engine sub-harness 3P (Brown) connector
- Ignition pulse generator 2P (Blue) connector
- Alternator 3P (White) connector



Remove the bolt and gearshift pedal link.

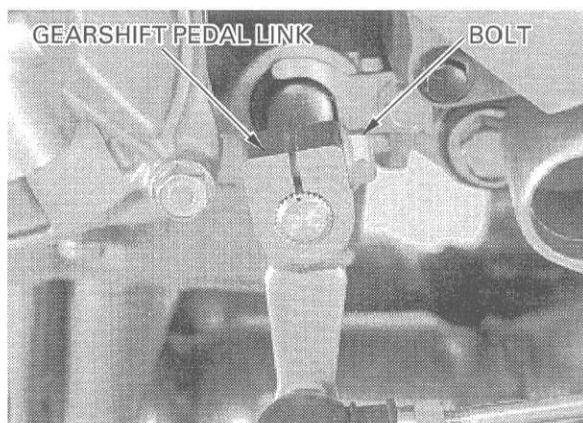

Support the engine using a jack or other adjustable support to ease of engine hanger bolts removal.

Remove the front right engine hanger bolt/nut and distance collar.  
Remove the bolts and engine hanger bracket.

