


## CYLINDER HEAD/VALVES

Install the cam chain tensioner lifter into the cylinder block.

Install the new sealing washers and bolts, then tighten the bolts to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

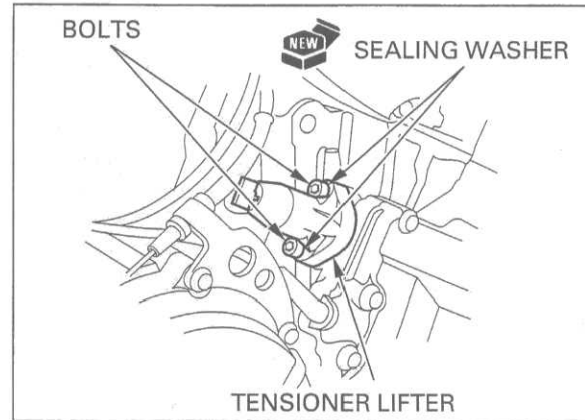

Remove the stopper tool.

Install a new sealing washer and tighten the sealing bolt securely.

