




Remove the bolts and shift drum bearing set plate.

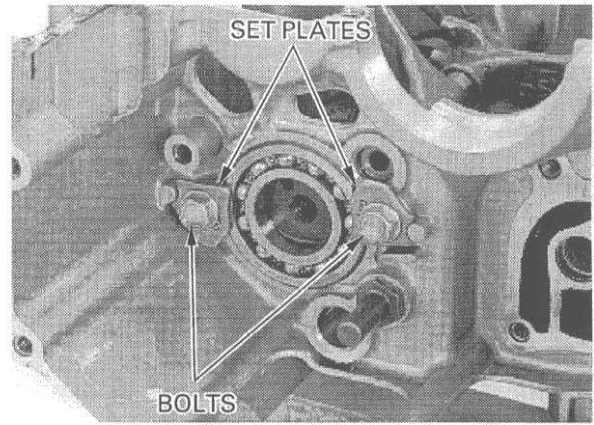

Remove the shift fork shaft and shift forks.

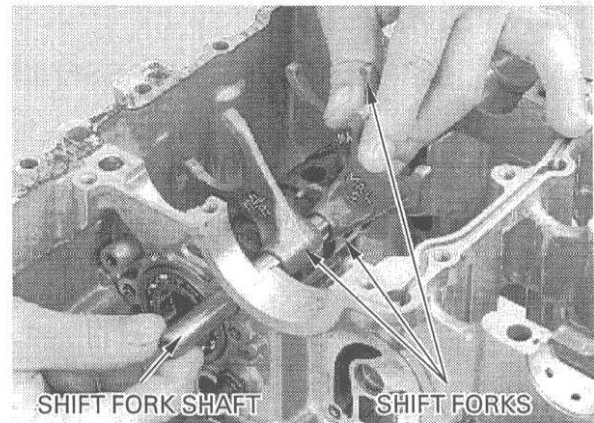

Remove the shift drum bearing and shift drum.

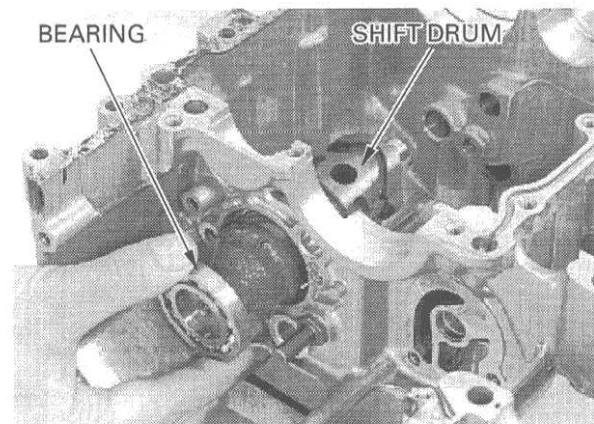

## DISASSEMBLY

Disassemble the mainshaft and countershaft.

