

# HYDRAULIC BRAKE

Install the push rod into the master cylinder.  
Install the snap ring using the special tool.

**CAUTION:**

*Be certain the snap ring is firmly seated in the groove.*

**TOOL:**



**Snap ring pliers**

07914-SA50001 or  
07914-3230001


Install the boot.

If the push rod is disassembled, adjust the push rod length as shown.  
After adjustment, tighten the lock nut to the specified torque.

**TORQUE:** 18 N·m (1.8 kgf·m , 13 lbf·ft)

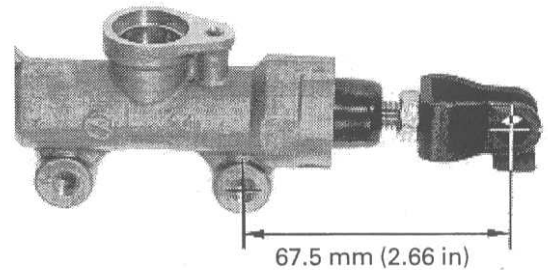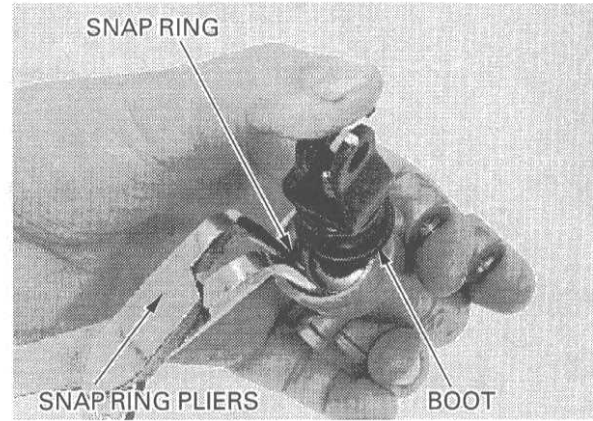

Apply brake fluid to a new O-ring and install it onto the reservoir joint.  
Install the reservoir joint into the master cylinder.

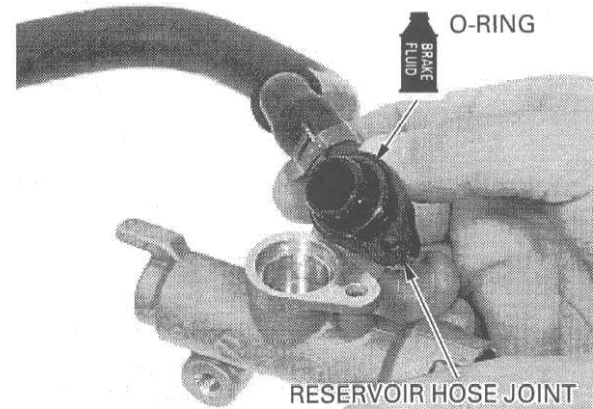

Apply a locking agent to the reservoir joint screw threads.  
Install and tighten the screw to the specified torque.

**TORQUE:** 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

