


Connect the side stand switch 3P (Green) connector.

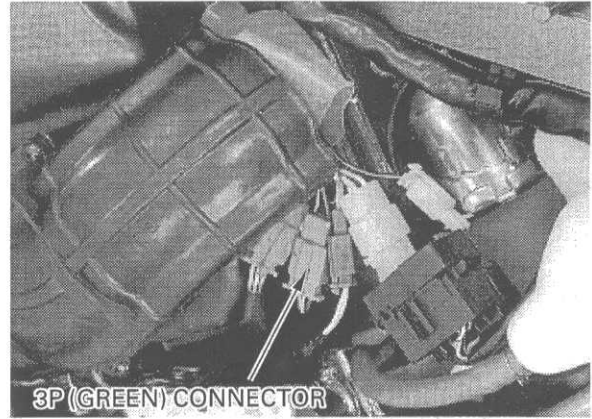


## HORN

Disconnect the wire connectors from the horn.

Connect the 12 V battery to the horn terminal directly.

The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

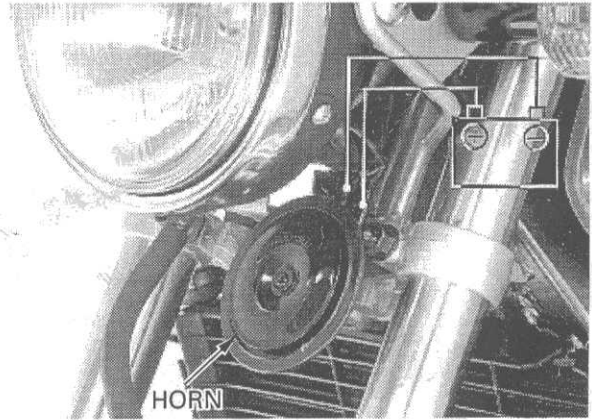

## TURN SIGNAL RELAY

### INSPECTION

Check the following:

- Battery condition
- Burned out bulb or non-specified wattage
- Burned fuse
- Ignition switch and turn signal switch function
- Loose connectors

If the above items are all normal, check the following:

Disconnect the turn signal connectors from the relay.



1. Short the Black/Brown and Gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check the turn signal light by turning the switch ON.

Light comes on

Light does not come on

- Broken wire harness

2. Check for continuity between the Green terminal of the relay connector and ground.

Continuity

No continuity

- Faulty turn signal relay.
- Poor connection of the connector.

- Broken ground wire