


Front Brake Pad Replacement

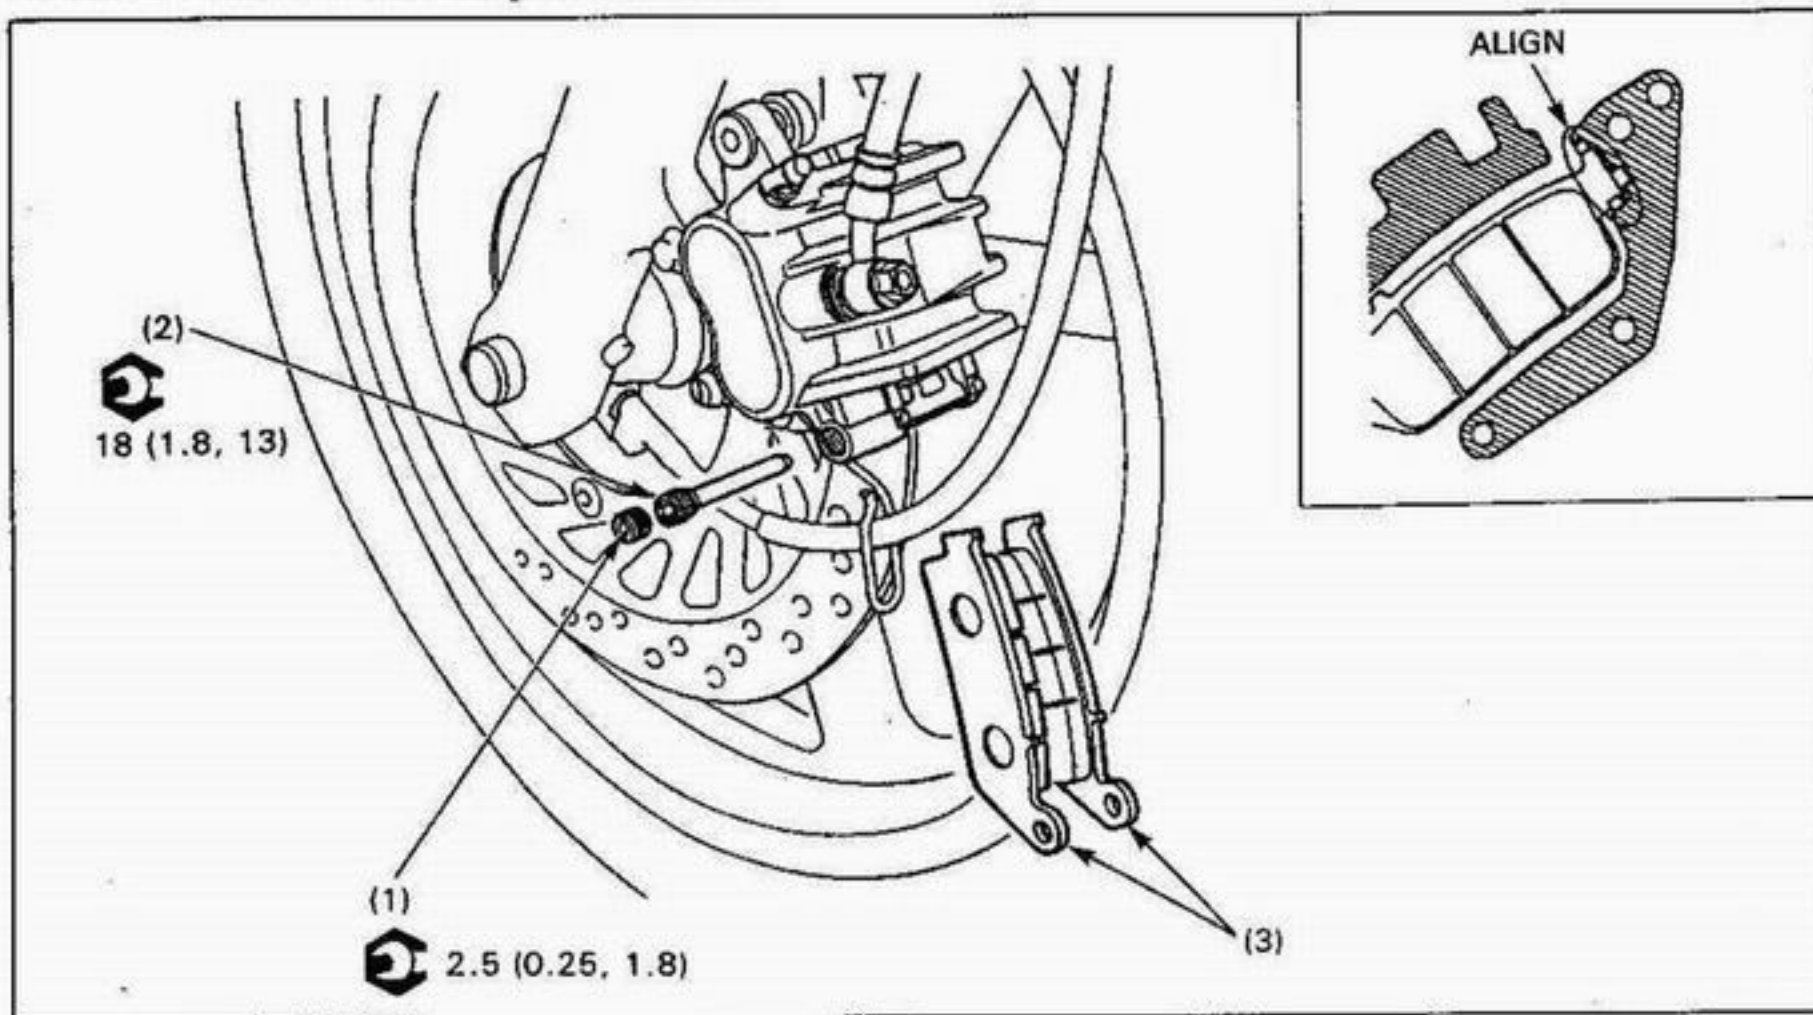

WARNING

• A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE

- Pushing the caliper against the disc, push the caliper pistons all the way in to allow the installation of new pads.
- Do not squeeze the brake lever when the brake pads are removed, or it will be difficult to refit the disc between the brake pads.
- Replace brake pads as a set.
- Apply a thin coating of silicone grease onto the pad pin as a rust preventative.
- After replacement, operate the brake lever to seat the caliper pistons against the pads.

Procedure	Qty	Remarks
Removal Order		Installation is in the reverse order of removal.
(1) Pad pin plug	1	
(2) Pad pin	1	Insert the pin, pushing the pads against the pad spring.
(3) Brake pad	2	Align the pad lug with the pad retainer as shown.