



## PRESSURE RELIEF VALVE/OIL STRAINER

### NOTE


The oil strainer can be removed with the engine mounted in the frame.

### OIL PAN REMOVAL

Remove the exhaust pipes (Page 17-2).  
Drain the engine oil (Page 2-3).  
Remove the right and left oil hoses by removing the bolts.


Remove the oil pan bolts and oil pan.

Remove the oil pan gasket.

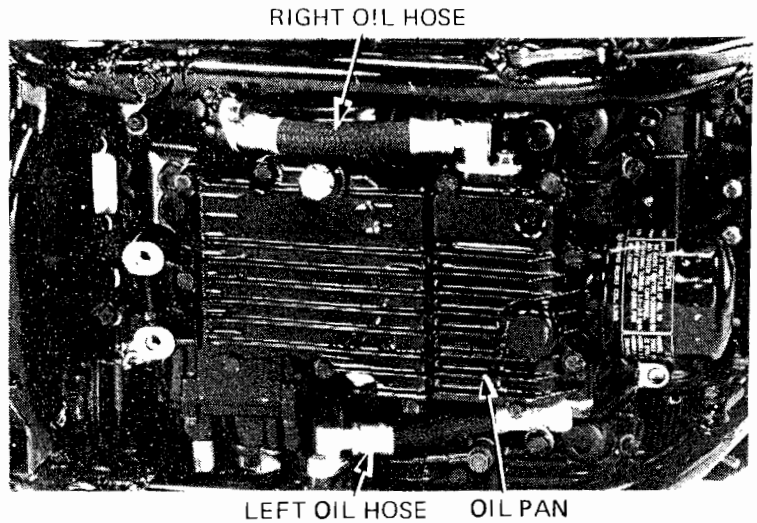

### RELIEF VALVE INSPECTION

Remove the pressure relief valve and check it for operation.

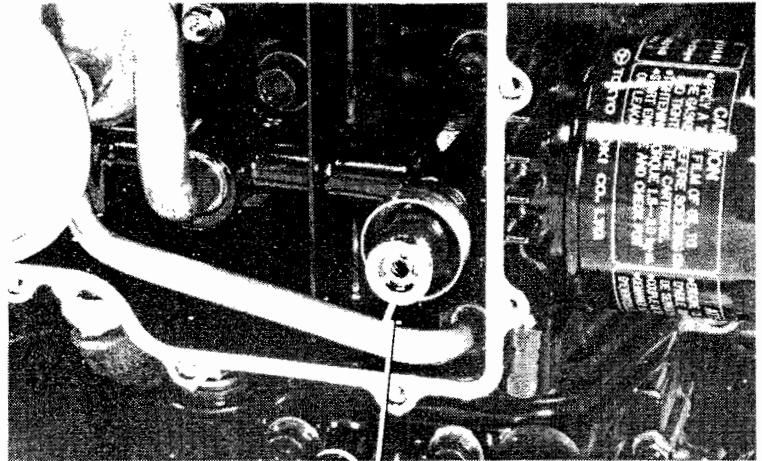

Remove the snap ring and disassemble the relief valve.

Check the valve for clogging or damage.  
Check the spring and piston for wear or damage.  
Assemble the parts in the reverse order of disassembly.

